



Grandstream Networks, Inc.

UCM6xxx series IP PBX

Security Manual



Table of Contents

OVERVIEW	3
Security Bulletins	4
WEB UI ACCESS	6
UCM HTTP Server Access	6
Protocol Type	6
User Login.....	7
Login Settings	9
User Management Levels	9
EXTENSION SECURITY	12
SIP/IAX Password.....	12
ACL Policy.....	12
<i>Example: Local Network Address.....</i>	<i>12</i>
SRTP.....	15
TRUNK SECURITY.....	16
Outbound Rule Permissions	16
<i>Privilege Level</i>	<i>17</i>
<i>Source Caller ID Filter</i>	<i>17</i>
<i>Password Protection.....</i>	<i>17</i>
<i>PIN Groups</i>	<i>18</i>
IVR Dial Trunk.....	19
TLS	21
FIREWALL.....	23
Static Defense.....	23
<i>Static Defense Example: Blocking TCP Connection from a Specific Host.....</i>	<i>24</i>
Dynamic Defense.....	25
Fail2ban	25
AMI.....	28



Table of Figures

Figure 1 : HTTP server settings in UCM62xx and UCM6510	6
Figure 2: HTTP server settings in UCM63xx/A series.....	7
Figure 3 : IP address whitelist to access the UCM	7
Figure 4: UCM6302 Web UI Login	8
Figure 5: Default Random Password	8
Figure 6: Login Settings	9
Figure 7: Creating Custom Privilege Levels.....	11
Figure 8: ACL Policy – Local Network Address.....	13
Figure 9: Registration attempt Failed from Subnet Not Allowed for Registration	13
Figure 10: Registration Failed from Subnet Not Allowed for Registration	14
Figure 11: Registration Successful from Allowed Subnet	14
Figure 12: Enabling SRTP	15
Figure 13: Outbound Rule Permissions	16
Figure 14: Source Caller ID Filter	17
Figure 15: Password Protection	18
Figure 16: Adding PIN Groups	18
Figure 17: Outbound route with PIN group	19
Figure 18: IVR Dial Trunk.....	20
Figure 19: PBX Settings→SIP Settings→TCP/TLS.....	21
Figure 20: Firewall Rule Custom Configuration	24
Figure 21: Static Defense Blocking Host 192.168.40.121 Using TCP Connection	24
Figure 22: Host blocked by UCM	25
Figure 23: Fail2Ban Configuration	26
Figure 24: Asterisk Service Fail2Ban setting	27



OVERVIEW

This document presents a summary of security measures, factors, and configurations that users are recommended to consider when deploying the UCM.

Note: We recommend to always use the latest official firmware for improved security.

The following sections are covered in this document:

- **Web UI Access**

Web UI access is protected by username/password and login timeout. Two-level user management is configurable. Admin with limited access can be created by the default super administrator.

- **Extension Security**

Extension security utilizes SIP/IAX passwords for authentication, IP address whitelisting, and SRTP encryption.

- **Trunk Security**

Trunk security utilizes privilege levels and source caller ID filters to prevent outbound calls from unintended sources.

- **TLS Protocol**

TLS is utilized to encrypt SIP signaling.

- **Firewall Features**

Three different security measures can be configured to protect the UCM against malicious attacks: Static Defense, Dynamic Defense and Fail2ban.

- **AMI**

AMI feature is used to let the user connect to Asterisk instance to read and track the state of telephony client, it may come with security concerns for UCM administrators that needs to be considered.



Security Bulletins

- Potential Vulnerability Associated With Use of Allow Guest Calls Option [Grandstream Security Bulletin GS13-UCM001](#)
- Potential Vulnerability Associated With Misuse of Dial Trunk Option in IVR [Grandstream Security Bulletin GS13-UCM002](#)
- Security Vulnerability Associated With Returned Cookie from WebUI Login Session [Grandstream Security Bulletin GS17-UCM003](#)



This document is subject to change without notice. The latest electronic version of this document is available for download here: <http://www.grandstream.com/support>

Reproduction or transmittal of the entire or any part, in any form or by any means, electronic or print, for any purpose without the express written permission of Grandstream Networks, Inc. is not permitted.



WEB UI ACCESS

UCM HTTP Server Access

The UCM embedded web server responds to HTTP/HTTPS GET/POST requests. Embedded HTML pages allow users to configure the device through a web browser such as Microsoft IE, Mozilla Firefox, Google Chrome, etc. With this, administrators can access and configure all available UCM information and settings. It is critical to understand the security risks involved when placing the UCM on public networks.

Protocol Type

The UCM63xx/A series only support HTTPS protocol for web access, while the UCM62xx and the UCM6510 series support both HTTP and HTTPS to access the UCM web UI and can be configured under web UI→**Settings**→**HTTP Server**. The selected protocol type will also be the one used for Zero Config when configs are pushed to endpoint devices. To secure transactions and prevent unauthorized access, it is highly recommended to:

1. Use HTTPS instead of HTTP. (UCM63xx support only HTTPs protocol by default)
2. Disable option Redirect from Port 80 and,
3. Avoid using well known port numbers such as 80 and 443.

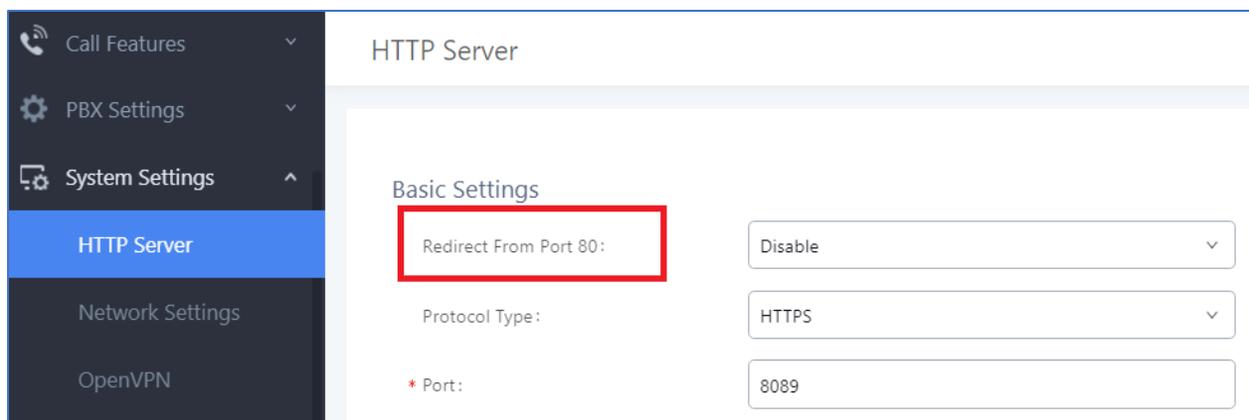


Figure 1 : HTTP server settings in UCM62xx and UCM6510



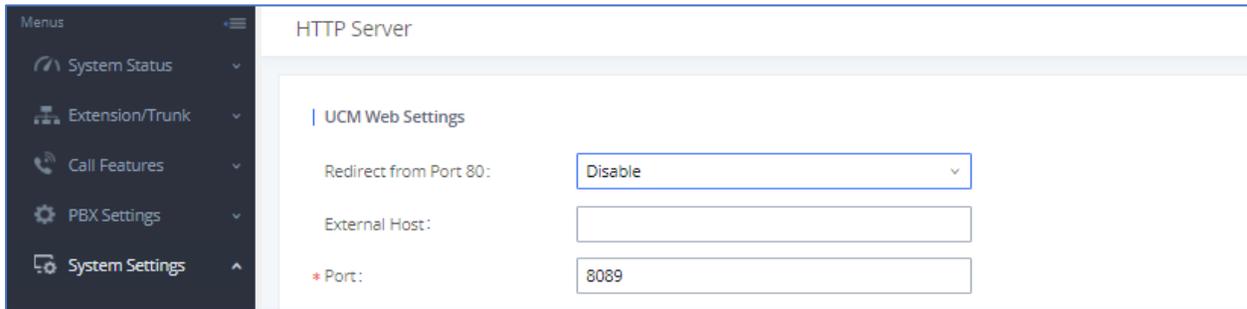


Figure 2: HTTP server settings in UCM63xx/A series

Finally, users have the option to specify a list of up to 10 IP addresses which will be allowed to access the UCM web UI. Addresses not listed will be restricted from accessing the UCM.

To enable and add to the IP address whitelist, navigate to System Settings → HTTP Server:

- Check the option “Enable IP Address Whitelist”
- Enter the permitted IP addresses along with the subnet masks.

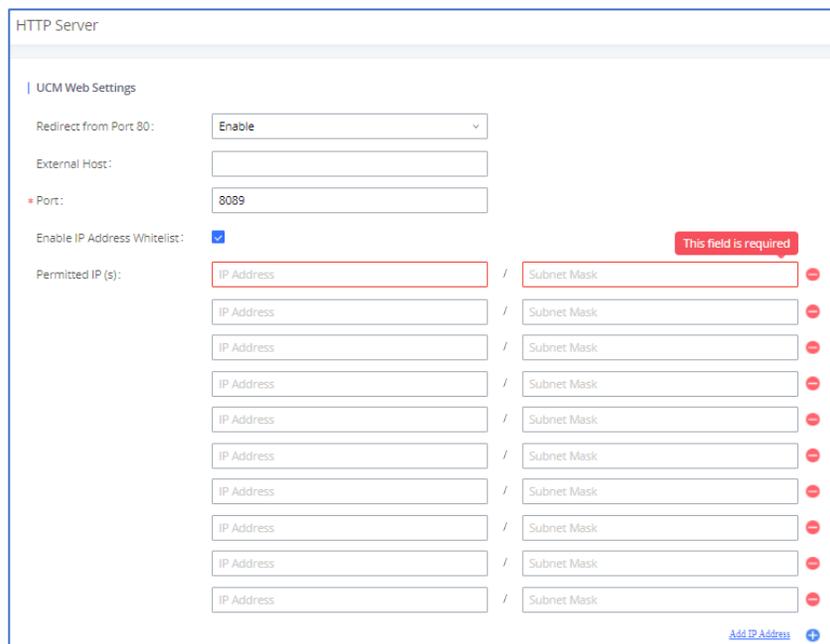


Figure 3 : IP address whitelist to access the UCM

User Login

Username and password are required to log into and access the UCM web UI.



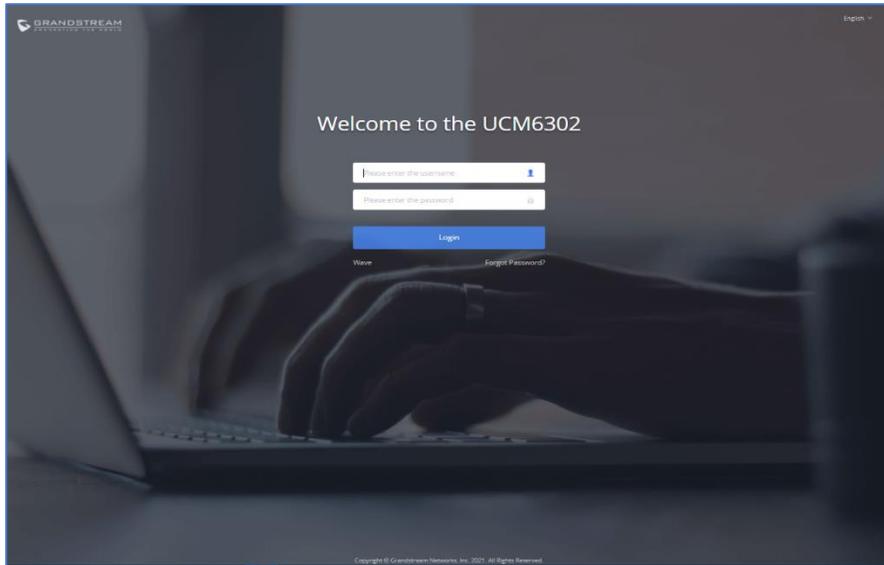


Figure 4: UCM6302 Web UI Login

The factory default username is “admin” while the default random password can be found on the sticker at the back of the unit.

Note: Units manufactured starting January 2017 have a unique random password printed on the sticker. Older units.

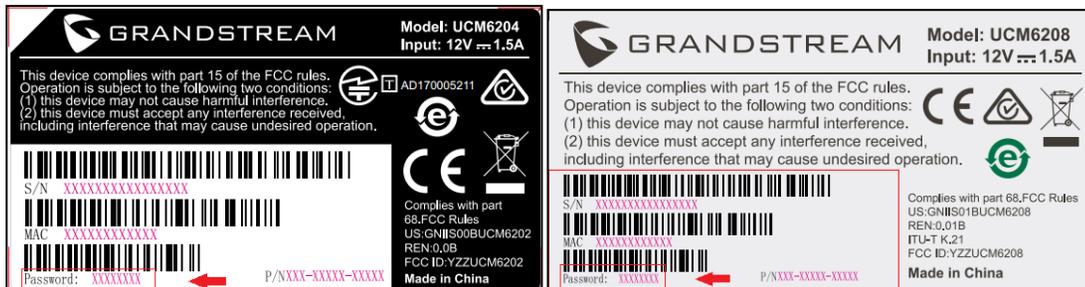


Figure 5: Default Random Password

It is highly recommended to change the password after logging in for the first time.

To change the password for default user "admin", navigate to System Settings→Change Information→Change Password/Email. The password length must be between 4-30 characters.

If PBX Settings→General Settings→Enable Strong Password is toggled on, the minimum password requirements are as follows:



- Must contain at least one number.
- Must contain at least one uppercase letter, lower case letter, OR special character.


Strong passwords with a combination of numbers, uppercase letters, lowercase letters, and special characters are always recommended for security.

Login Settings

To further prevent unauthorized access to the UCM web UI, users will automatically be logged out after the configured period of inactivity. Username and password will be required to access the web UI again.

The default login timeout is 10 minutes and can be changed by navigating to Maintenance→Login Settings→Login Security and modifying the User Login Timeout field.

Additionally, the UCM can also ban users after a specified number of failed login attempts for a specified amount of time. By default, users will be banned for 5 minutes after 5 failed login attempts.

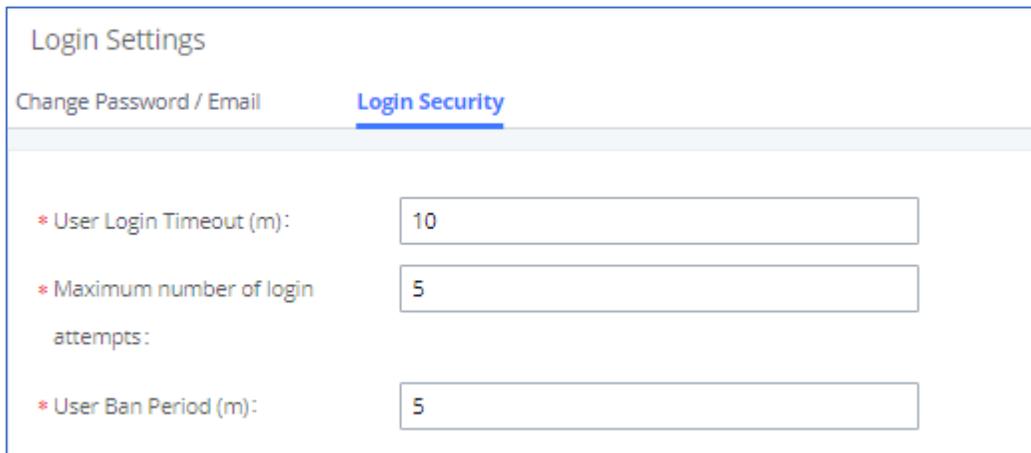

Login Settings	
Change Password / Email <u>Login Security</u>	
* User Login Timeout (m):	<input type="text" value="10"/>
* Maximum number of login attempts:	<input type="text" value="5"/>
* User Ban Period (m):	<input type="text" value="5"/>

Figure 6: Login Settings

User Management Levels

Four user privilege levels are currently supported:

- **Super Admin**
- **Admin**



- **Custom level**
- **Consumer**

Super Admin has access to all of the UCM's pages and can execute any operation. Admin can access most of the UCM's pages with the exception of the following:

- Maintenance→Upgrade
- Maintenance→Backup
- Maintenance→System Cleanup/Reset
- Maintenance→Operation Log

A "Super Admin" user with username "admin" is initially configured on the UCM with factory settings. It is the only allowed "Super Admin" account and cannot be deleted and changed. This super administrator could create, edit and delete new user accounts with lower privileges "Admin", "Consumer" and "Custom". Only Super Admin has the authority to view the activity of all users via the Operation Log.

If there is more than one PBX administrator managing the UCM, it is highly recommended to create Admin level users instead of giving out Super Admin access.

Custom privilege user levels can also be created and modified to have specific permissions including but not limited to:

- Status
- Conference
- System Events
- Feature Codes
- CDR
- PMS-Wakeup Service

To create a new custom privilege level, navigate to Maintenance→User Management→Custom Privilege, name the new custom user level and assign the desired modules as shown in the figure below.



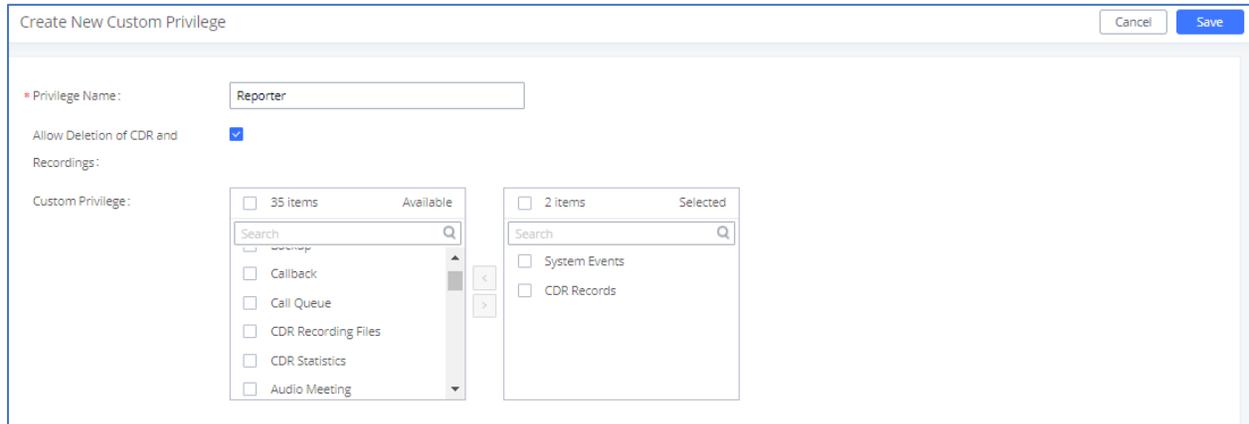


Figure 7: Creating Custom Privilege Levels

"Consumer" level access is the default privilege level assigned to newly created extensions and users. This level does not allow system-wide changes and access to advanced maintenance operations.

Note: "Allow Deletion of CDR and Recordings" option is used to determine if the user with CDR and recording files custom privilege can delete CDR and recording files or not.



EXTENSION SECURITY

SIP/IAX Password

When creating a new SIP/IAX extension, the UCM administrator is required to configure “SIP/IAX Password” which will be used for account registration authentication.

If “Enable Random Password” (PBX Settings→General Settings) is enabled, “SIP/IAX Password” is automatically filled with a randomly generated secure password when creating the extension on the UCM. “Passwords must contain 1) at least one number and 2) at least one lowercase letter, uppercase letter, special character and at least 8 characters”.

ACL Policy

The UCM administrator could control what IP address(s) is allowed to register to a certain extension by editing “ACL Policy” option under extension configuration dialog→“Media” tag. **Make sure to configure the “ACL Policy” option to the smallest set to block registration attempts from anyone that doesn’t need to register to the account.**

The ACL Policy options are:

- **Allow All:** Any IP address can register to this extension.
- **Local Network Address:** Only IP addresses in the configured network segments can register to this extension.

Example: Local Network Address

1. Assuming there are multiple subnets within the office and the devices in all subnets can reach each other, the network administrator would like to allow only devices in 192.168.40.x network to register to this UCM.
2. Under UCM web UI extension dialog, configure “Local Network Address” for “ACL Policy” option and 192.168.40.0 for “Local Subnet”.



Edit Extension: 1000

Basic Settings **Media** Features Specific Time Follow Me Cancel Save

SIP Settings

NAT:

* DTMF Mode: RFC4733

* Alert-info: None

Fax to Email: Yes

ACL Policy: Local Network Address

Local Network Address: 192.168.40.0

Codec Preference:

9 items Available		8 items Selected	
<input type="checkbox"/>	AAL2-G.726-32	<input type="checkbox"/>	PCMU
<input type="checkbox"/>	ADPCM	<input type="checkbox"/>	PCMA
<input type="checkbox"/>	G.723	<input type="checkbox"/>	GSM
<input type="checkbox"/>	H.263	<input type="checkbox"/>	G.726
<input type="checkbox"/>	H.263p	<input type="checkbox"/>	G.722

* Enable Direct Media: No

* TEL URI: Disabled

* Fax Mode: None

Enable T.38 UDPTL:

S RTP: Disabled

Figure 8: ACL Policy – Local Network Address

3. Save and Apply changes.

Now if the SIP end device is in the subnet other than 192.168.40.x, e.g., 172.18.31.x subnet, the UCM will not allow registration using this extension. The following figure shows the SIP device IP address is 172.18.31.17. The UCM on IP 192.168.40.171 replies 404 Not Found for the registration request.

No.	Time	Source	Destination	Protocol	Length	Info
215	2015-01-07 18:04:20.987347	172.18.31.17	192.168.40.171	SIP	629	Request: REGISTER sip:192.168.40.171 (1 binding)
216	2015-01-07 18:04:20.989556	192.168.40.171	172.18.31.17	SIP	491	Status: 404 Not found
334	2015-01-07 18:04:42.194344	172.18.31.17	192.168.40.171	SIP	629	Request: REGISTER sip:192.168.40.171 (1 binding)
336	2015-01-07 18:04:42.196110	192.168.40.171	172.18.31.17	SIP	491	Status: 404 Not found
341	2015-01-07 18:05:03.242985	172.18.31.17	192.168.40.171	SIP	629	Request: REGISTER sip:192.168.40.171 (1 binding)
342	2015-01-07 18:05:03.244559	192.168.40.171	172.18.31.17	SIP	491	Status: 404 Not found

Figure 9: Registration attempt Failed from Subnet Not Allowed for Registration



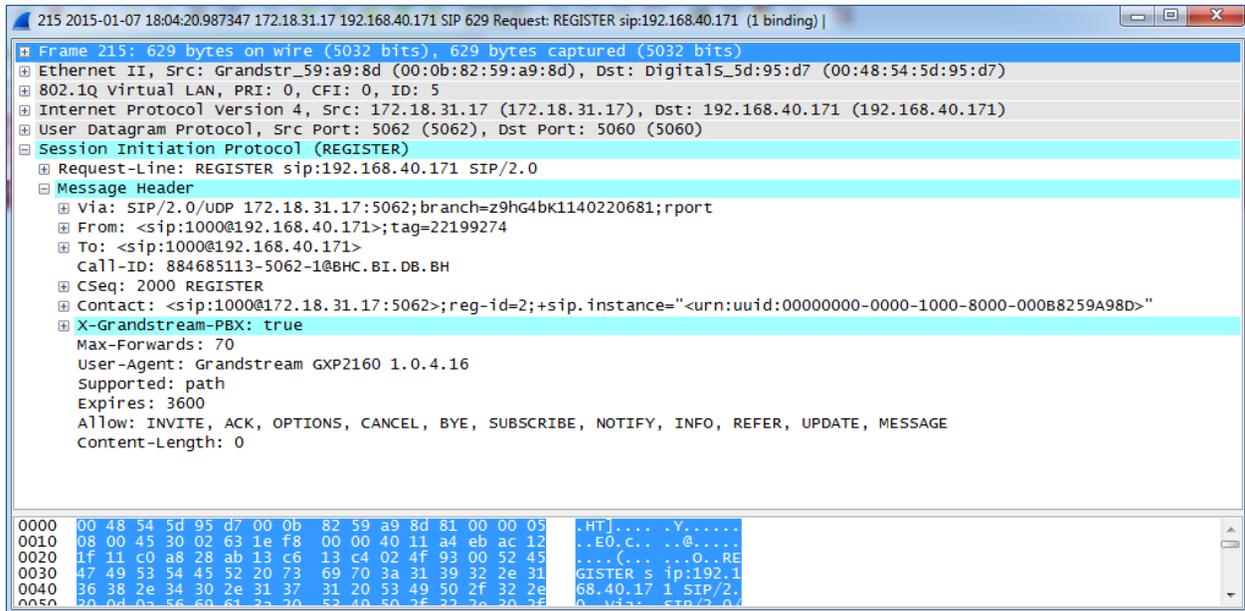


Figure 10: Registration Failed from Subnet Not Allowed for Registration

Once the device is moved to the 192.168.40.x subnet, registration will be successful. The following figure shows the IP address for the same SIP endpoint is 192.168.40.190. The UCM on IP address 192.168.40.171 replies 200 OK to the registration request.

1002	2015-01-07 18:10:34.189211	192.168.40.190	192.168.40.171	SIP	632 Request: REGISTER sip:192.168.40.171 (1 binding)
1003	2015-01-07 18:10:34.190652	192.168.40.171	192.168.40.190	SIP	576 Status: 401 unauthorized
1004	2015-01-07 18:10:34.198412	192.168.40.190	192.168.40.171	SIP	796 Request: REGISTER sip:192.168.40.171 (1 binding)
1005	2015-01-07 18:10:34.206894	192.168.40.171	192.168.40.190	SIP	593 Status: 200 OK (1 binding)

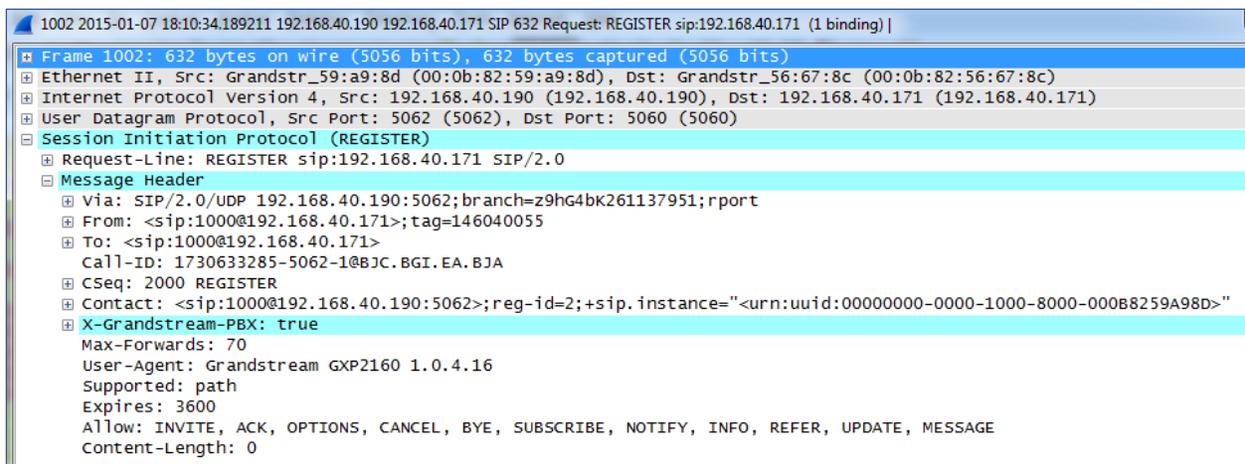


Figure 11: Registration Successful from Allowed Subnet



SRTP

UCM supports SRTP for encrypted audio streams. It is disabled by default. To enable it, navigate to Extensions→Edit Extension→Media and select the desired SRTP option.

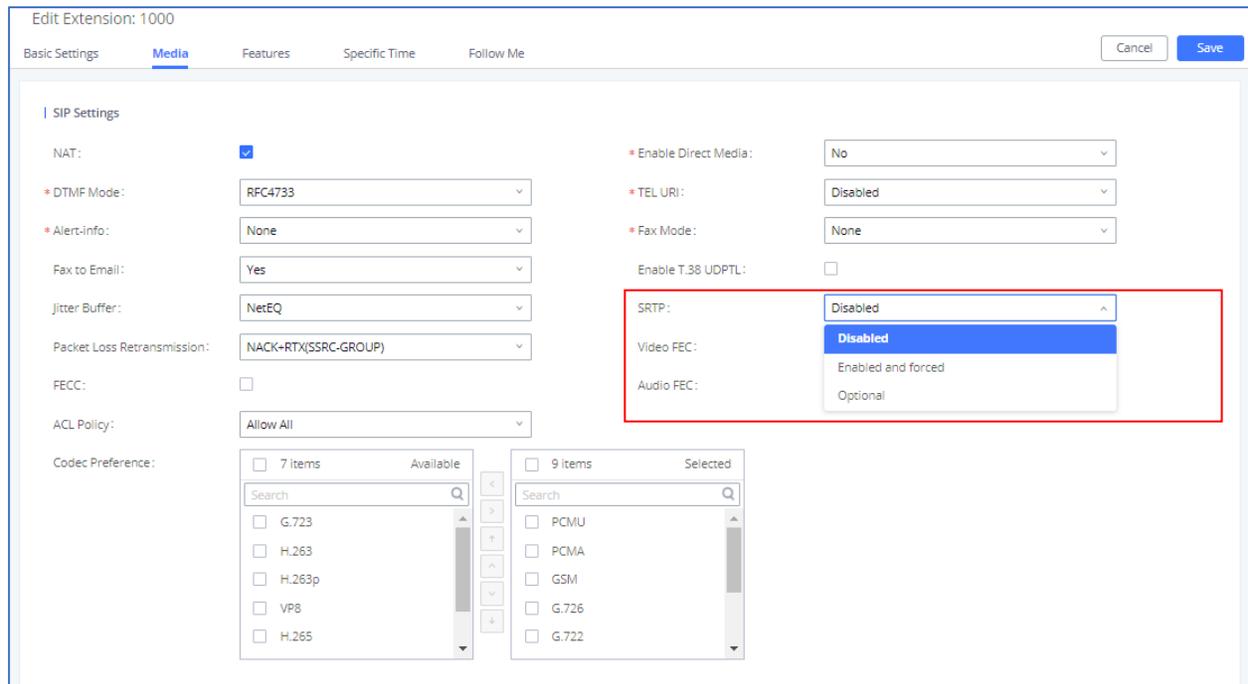


Figure 12: Enabling SRTP

As shown above, users have two options while enabling SRTP under extension parameters:

- **Enabled and forced:** Extension will support SRTP and will not allow any calls without it.
- **Optional** Extension will support SRTP and will allow negotiation with calls without SRTP.




TRUNK SECURITY

A potential risk for trunks is unauthorized international and long-distance calls, which can result in unexpected high charges before the issue is noticed. Therefore, administrators must take special care when configuring trunks that would be charged for placing certain calls such as long-distance calls and international calls.

Outbound Rule Permissions

Users can apply one of four security measures on the UCM to control outbound calls.

1. Privilege Level
2. Enable Filter on Source Caller ID
3. Password protection
4. PIN groups

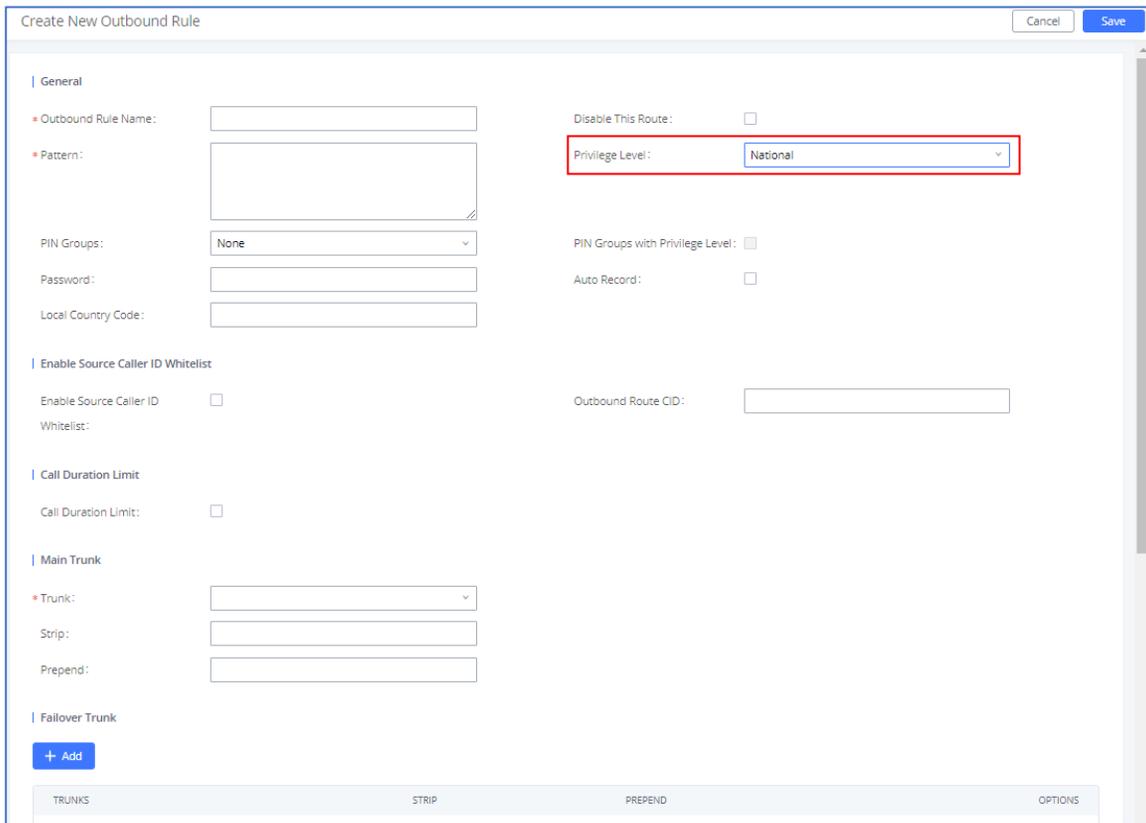

The screenshot shows the 'Create New Outbound Rule' configuration window. The 'Privilege Level' dropdown menu is highlighted with a red box and set to 'National'. Other visible fields include 'Outbound Rule Name', 'Pattern', 'PIN Groups' (set to 'None'), 'Password', 'Local Country Code', 'Disable This Route' (checkbox), 'PIN Groups with Privilege Level' (checkbox), 'Auto Record' (checkbox), 'Outbound Route CID', 'Enable Source Caller ID Whitelist' (checkbox), 'Call Duration Limit' (checkbox), 'Main Trunk' (dropdown), 'Strip', 'Prepend', and 'Failover Trunk'. There is also an '+ Add' button and a bottom bar with 'TRUNKS', 'STRIP', 'PREPEND', and 'OPTIONS' tabs.

Figure 13: Outbound Rule Permissions




Privilege Level

On the UCM, the supported 4 privilege levels are “Internal”, “Local”, “National” and “International” from the lowest to the highest. Outbound calls through trunk can be placed only if the permission level assigned to the caller is higher or equal to the privilege level of the outbound rule. Outbound call requests from users with privilege lower than the outbound rule will be rejected.

Source Caller ID Filter

UCM administrators can specify the extensions/extension groups that can use the outbound rule. This can be done by selecting extension/extension groups or defining pattern for the source caller ID in “Source Caller ID pattern” field. The extension allowed to make outbound call will either need to be an extension in the selected list or match the defined pattern.

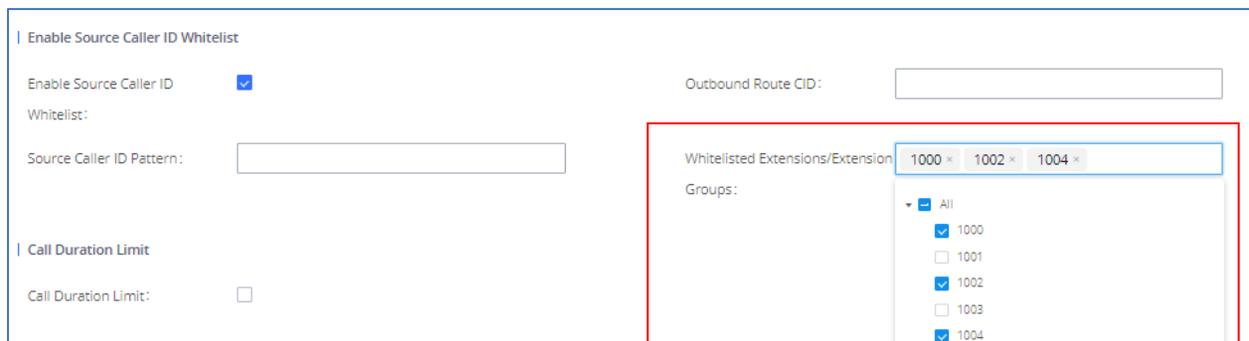

Enable Source Caller ID Whitelist

Enable Source Caller ID

Whitelist:

Source Caller ID Pattern:

Outbound Route CID:

Whitelisted Extensions/Extension Groups:

Groups:

- All
- 1000
- 1001
- 1002
- 1003
- 1004

Call Duration Limit

Call Duration Limit:


Figure 14: Source Caller ID Filter

For detailed configuration instructions, please refer to MANAGING OUTBOUND ROUTE section in white paper: [How to manage inbound/outbound route on UCM6xxx](#)

Password Protection

Administrators can protect outbound rules with passwords that would be requested by the UCM when callers try to use the configured routes.



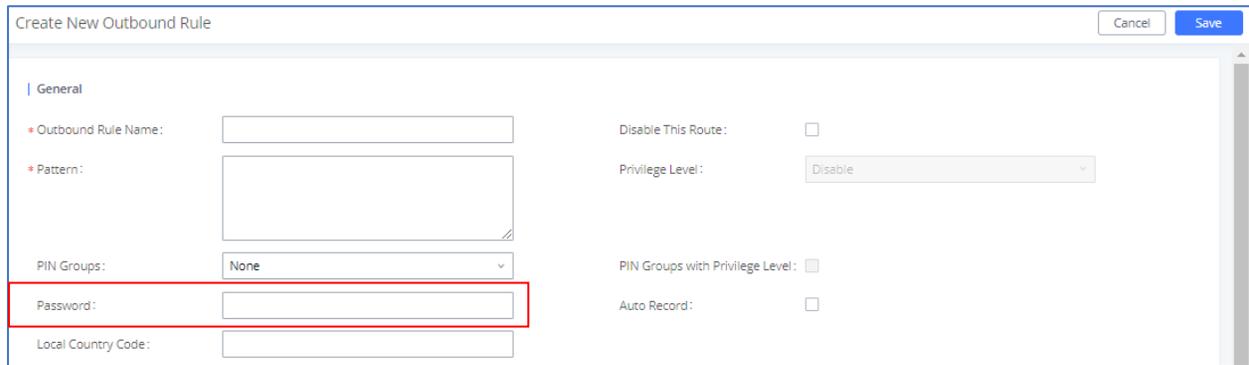

Create New Outbound Rule

Cancel Save

General

* Outbound Rule Name:

* Pattern:

PIN Groups:

Disable This Route:

Privilege Level:

PIN Groups with Privilege Level:

Auto Record:

Local Country Code:


Password:

Figure 15: Password Protection

PIN Groups

In the scenario where multiple users share the same phone, and the phone is used to make outbound calls, outbound routes can be set to require PIN entry to use. To set up a PIN group:

1. Navigate on to **Extension/Trunk→Outbound Routes→PIN Groups**
2. Click Add to create a new PIN group and enter the user names and passwords.

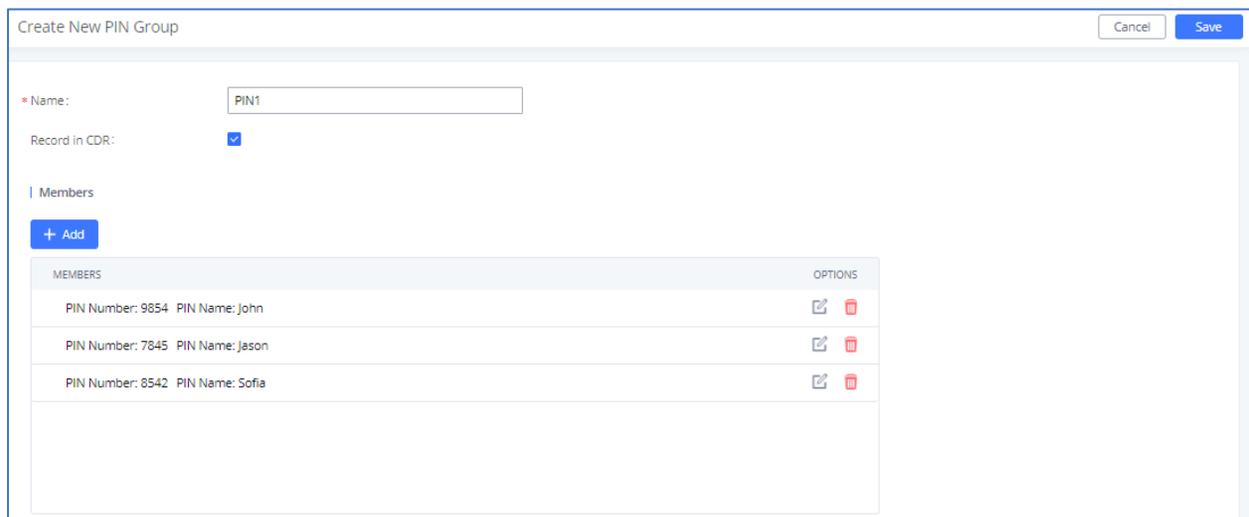

Create New PIN Group

Cancel Save

* Name:

Record in CDR:

Members


+ Add

MEMBERS	OPTIONS
PIN Number: 9854 PIN Name: John	<input type="text"/> <input type="text"/>
PIN Number: 7845 PIN Name: Jason	<input type="text"/> <input type="text"/>
PIN Number: 8542 PIN Name: Sofia	<input type="text"/> <input type="text"/>

Figure 16: Adding PIN Groups

3. Save and apply. The PIN Group can now be selected in Outbound Routes. Each time one of the PIN Group members makes an outbound call, he/she will be requested to enter their PIN.



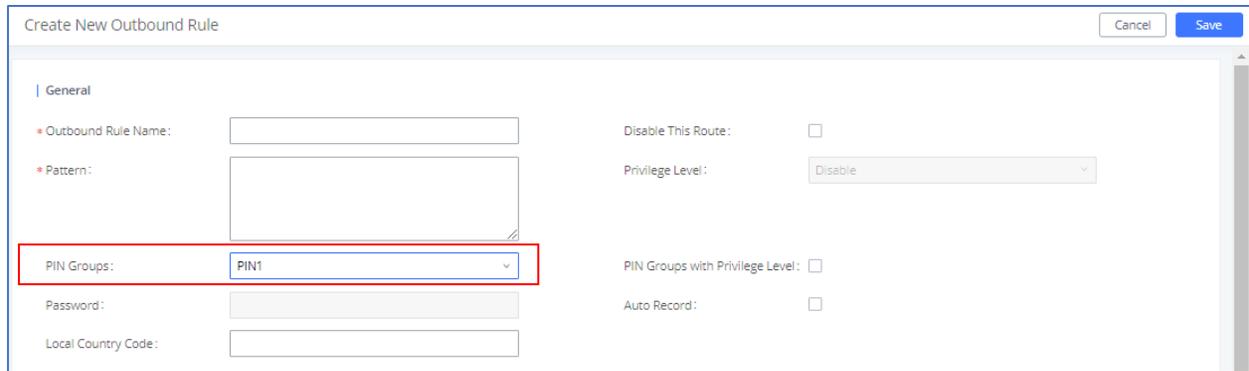

The screenshot shows a web-based configuration interface for creating a new outbound rule. The window title is "Create New Outbound Rule" and it has "Cancel" and "Save" buttons in the top right corner. The "General" tab is active. The form contains the following fields:

- Outbound Rule Name:** A text input field.
- Pattern:** A large text area for defining the rule pattern.
- PIN Groups:** A dropdown menu with "PIN1" selected. This field is highlighted with a red rectangular box.
- Password:** A text input field.
- Local Country Code:** A text input field.
- Disable This Route:** A checkbox, currently unchecked.
- Privilege Level:** A dropdown menu with "Disable" selected.
- PIN Groups with Privilege Level:** A checkbox, currently unchecked.
- Auto Record:** A checkbox, currently unchecked.

Figure 17: Outbound route with PIN group

IVR Dial Trunk

When creating/editing an IVR, the administrator can decide whether or not to allow the calls entering the IVR to make outbound calls through trunks by configuring “Dial Trunk” and “Permission”. If “Dial Trunk” option is enabled, the caller calling into the IVR will be able to dial external numbers through a trunk if the IVR’S permission is higher than or equal to the privilege of the trunk. The potential risk here is that unwanted users may call into IVR and then dial external numbers. This could possibly generate unexpected high charges especially if an IVR is configured as the destination of an inbound route of a PSTN trunk, in which case, anyone can call into the IVR and then dial long distance or international calls.



Create New IVR

Basic Settings
Key Pressing Events

* Name:

* Extension:

Dial Trunk:

Auto Record:

* Privilege:

Dial Other Extensions: All Extension Audio Meeting Video Meeting Call Queue
 Ring Group Paging/Intercom Groups Voicemail Groups
 Fax Extension Dial By Name

* IVR Black/Whitelist:

Replace Display Name:

Return to IVR Menu:

Alert-info:

* Prompt: [Upload Audio File](#)

[Add Prompt](#) +

* Digit Timeout (s):

* Response Timeout:

* Response Timeout Prompt: [Upload Audio File](#)

* Invalid Input Prompt: [Upload Audio File](#)

* Response Timeout Prompt Repeats:

* Invalid Input Prompt Repeats:

Language:

Copyright © Grandstream Networks, Inc. 2021. All Rights Reserved.

Figure 18: IVR Dial Trunk

We recommend disabling “Dial Trunk” option unless the risk associated with it is clearly understood or the PBX administrator intentionally configures it to do so for specific reasons.

For more information about IVR permissions, please refer to IVR PERMISSION section in white paper:


[How to manage inbound/outbound route on UCM6xxx](#)



TLS

UCM has the option to secure SIP packets with TLS encryption, allowing for safe transactions over untrusted networks and with authenticated parties.

TLS can be configured in PBX Settings→SIP Settings→TCP/TLS.

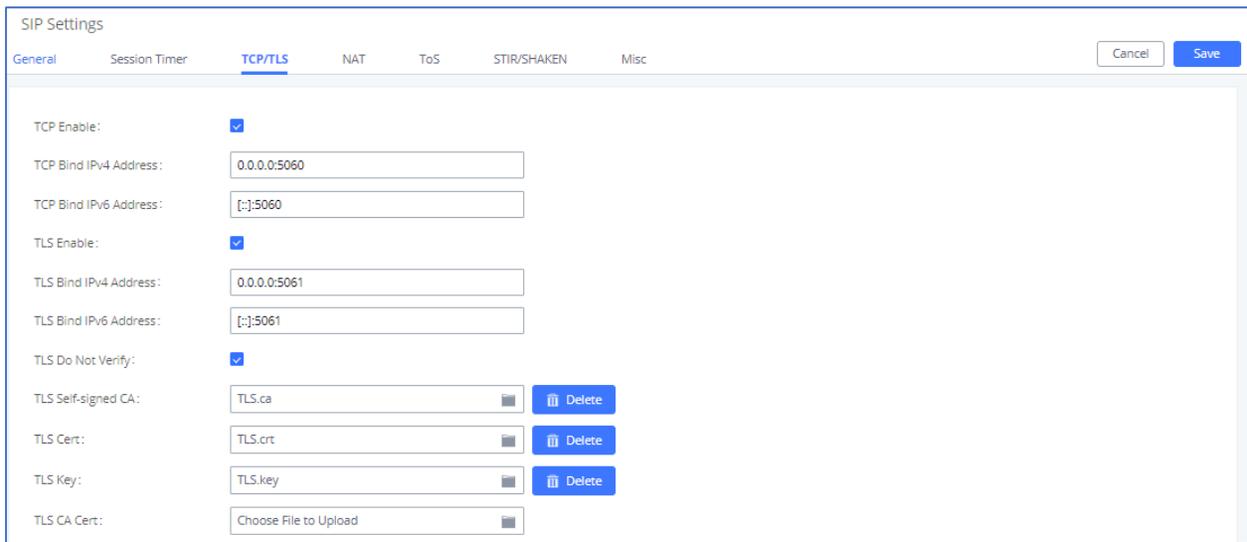

The screenshot shows the 'SIP Settings' window with the 'TCP/TLS' tab selected. The settings are as follows:

- TCP Enable:**
- TCP Bind IPv4 Address:** 0.0.0.0:5060
- TCP Bind IPv6 Address:** [::]:5060
- TLS Enable:**
- TLS Bind IPv4 Address:** 0.0.0.0:5061
- TLS Bind IPv6 Address:** [::]:5061
- TLS Do Not Verify:**
- TLS Self-signed CA:** TLS.ca [Delete]
- TLS Cert:** TLS.crt [Delete]
- TLS Key:** TLS.key [Delete]
- TLS CA Cert:** Choose File to Upload

Figure 19: PBX Settings→SIP Settings→TCP/TLS

1. Tick the "TLS Enable" box to activate TLS. (Enabled by default in the UCM63xx/A series).
2. Configure "TLS Do Not Verify", "TLS Self-Signed CA" and "TLS Cert" to achieve basic TLS authentication and encryption.

- **TLS Self-Signed CA**

Used when UCM is acting as the client to authenticate a server. If the server uses a self-signed certificate, that certificate should also be installed on the UCM for successful verification. If it is signed by a CA, then a copy of the CA server certificate should be installed.

- **TLS Cert**

Used when UCM acts as the server. TLS Cert is sent to the client during the TLS handshake and includes the key and server certificate. The "common name" field in the server certificate should



match the server host (either by IP address or domain name). This is required if the client is another UCM (not a standard, as some clients do not have this requirement for server authentication). If the common name does not match, authentication on the client side will fail, and the TLS connection will fail to establish.

- **TLS Do Not Verify**

Effective only when the UCM is acting as the client. If enabled, the certificate sent by the server will not be verified. This is useful for authentication between two peered UCMs using the factory certificate, which has "common name" configured with the value "localhost", which is not a valid host and will result in authentication failure. Skipping verification will not have any effect on the encryption itself. If disabled, the client will verify the server certificate with the "TLS Self-Signed CA".

Note: SIP endpoints will still need to be configured to use TLS in order to encrypt SIP messages sent to the UCM.



FIREWALL

The UCM firewall functionality consists of three components: Static Defense, Dynamic Defense, and Fail2ban. Each can be configured for specific types of malicious attacks.

Static Defense

Static Defense uses pre-configured filtering rules to protect the UCM. Three filtering rule types are supported: ACCEPT, REJECT, and DROP. These rules can be applied to specific source/destination IP addresses and ports. Static Defense can be configured in System Settings→Security Settings→Static Defense.

When creating or editing rules, the following options are available:

- **Rule Name:** A name to easily identify the rule and its purpose.
- **Action:** The action to perform for this rule. Accept, Reject, or Drop the connection if criteria is met.
- **Type:** The direction of the network traffic. IN for inbound traffic. OUT for outbound traffic.
- **Interface:** Select network interface where the traffic will go through (this option is only available for devices with both WAN and LAN ports).
- **Service:** The specific services to affect. FTP, SSH, Telnet, HTTP, and LDAP are available. Custom allows administrators to specify source/destination IP addresses and ports and the protocol.

Additionally, the following features are also available to further increase security:

1. Ping Defense

Protects against ping floods by not responding to ICMP echo requests.

2. SYN-Flood Defense

Protects against SYN floods by limiting the amount of SYN requests accepted per second.

3. Ping-of-Death defense


Protects against ping packets larger than 64 KB.

These settings can be enabled under System Settings→Security Settings→Static Defense →"Typical Firewall Settings".



Static Defense Example: Blocking TCP Connection from a Specific Host

This example demonstrates how to set up a new rule to block a host with a specific IP address to connect to UCM using TCP connection. In the following figure, 192.168.40.121 is the host IP address and 192.168.40.131 is the UCM's IP address. Port 8089 on UCM is used for HTTP server/web UI access. This setting will block host on 192.168.40.131 to access UCM port 8089 using TCP connection.

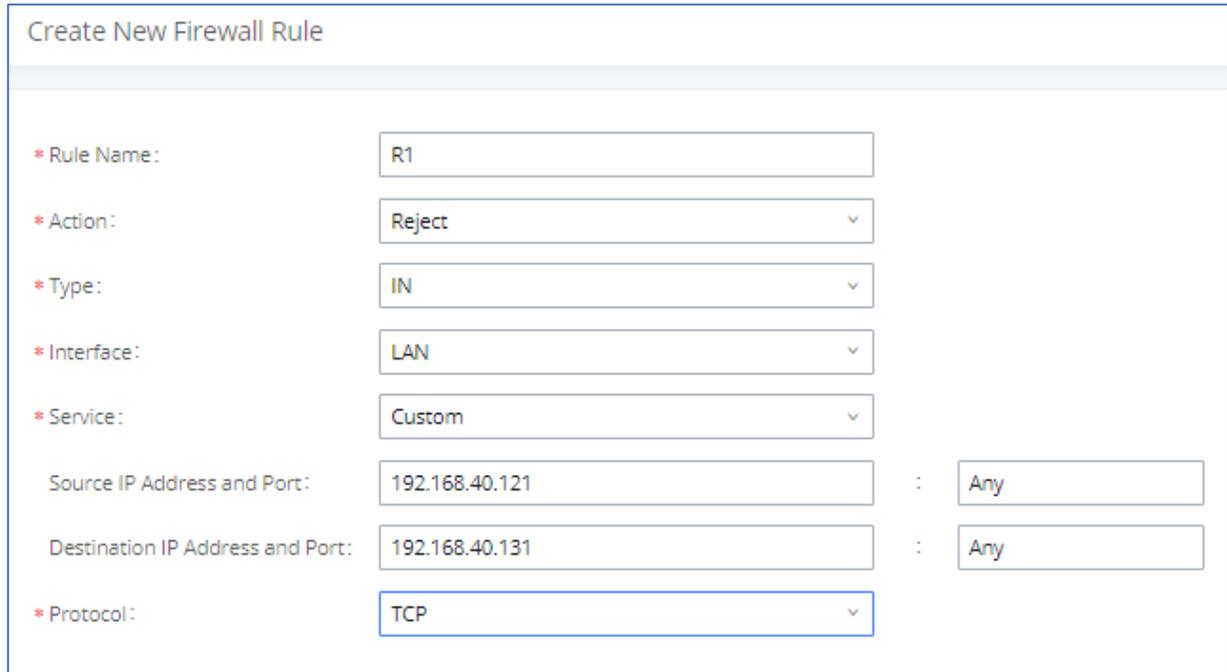

Create New Firewall Rule

* Rule Name:

* Action:

* Type:

* Interface:


* Service:

Source IP Address and Port: :

Destination IP Address and Port: :

* Protocol:

Figure 20: Firewall Rule Custom Configuration

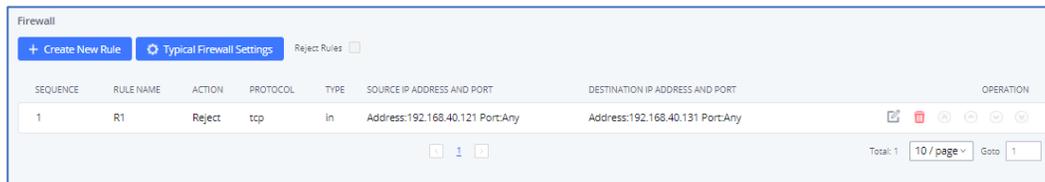

SEQUENCE	RULE NAME	ACTION	PROTOCOL	TYPE	SOURCE IP ADDRESS AND PORT	DESTINATION IP ADDRESS AND PORT	OPERATION
1	R1	Reject	tcp	in	Address:192.168.40.121 Port:Any	Address:192.168.40.131 Port:Any	

Figure 21: Static Defense Blocking Host 192.168.40.121 Using TCP Connection

After saving and applying the change, host 192.168.40.121 will not be able to access UCM web UI anymore.

```

Connection-specific DNS Suffix . :
Link-local IPv6 Address . . . . . : fe80::bca4:247b:116:9d66%11
IPv4 Address. . . . . : 192.168.40.121
Subnet Mask . . . . . : 255.255.255.0
Default Gateway . . . . . : 192.168.40.3
  
```



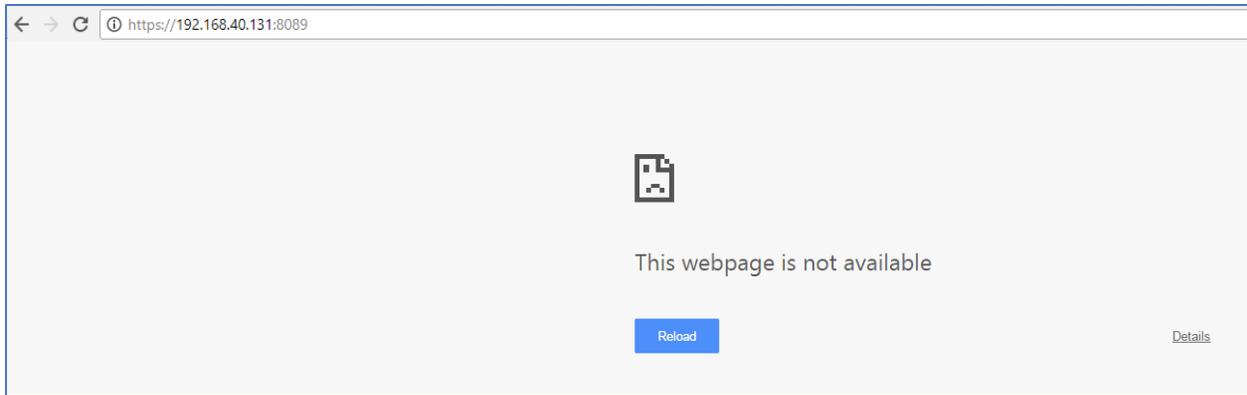


Figure 22: Host blocked by UCM

Dynamic Defense

Dynamic Defense protects the UCM by blacklisting individual hosts that send excessive connection attempts or brute force attacks. On UCM6102/6202/6204/6208/6510 devices, this requires Network Settings→Basic Settings→Method to be set to "Route". Dynamic Defense can be configured in Security Settings→Dynamic Defense, it will try to blacklist massive connection attempts or brute force attacks made by individual host.

Dynamic Defense's connection threshold and blacklist update interval can be adjusted in accordance to administrator preferences. Whitelist entries can be added to prevent specific IP addresses and ports from getting blocked.

For more configuration details, please refer to [UCM User Manual](#)

Fail2ban

Fail2ban protects the UCM by detecting excessive failed login attempts and SIP requests and blocking any further attempts from the same host.

Fail2Ban can be configured in System Settings→Security Settings→Fail2Ban. By default, Fail2Ban is disabled (see figure below).



Security Settings

Static Defense
Dynamic Defense
Fail2Ban
SSH Access

Global Settings

Enable Fail2Ban:

* Banned Duration (s):

* Max Retry Duration (s):

Fail2ban Whitelist: / -

[Add Fail2ban Whitelist](#) +

Local Settings

Asterisk Service:

Listening port number: UDP Port: 5060, TCP Port: 5060, 5061

* MaxRetry:

Login Attack Defense:

Listening port number: TCP Port

* MaxRetry:

Customer Service System Call Defense:

Listening port number: UDP Port: 5060, TCP Port: 5060, 5061, Websocket Port: 8088


* MaxRetry:

Figure 23: Fail2Ban Configuration

- **Enable Fail2ban:** Tick the box to enabled Fail2ban.
- **Banned Duration :** The amount of time in seconds that a host is banned for. A value of "0" means an permanent ban. Set to 600 seconds by default.
- **Max Retry Duration :** The maximum amount of failed attempts allowed within this window of time. Set to 600 seconds by default.
- **Fail2ban Whitelist:** The list of hosts that would not be blacklisted even if the number of failed SIP and login attempts exceeds the allowed limit.
- **MaxRetry :** The maximum number of failed attempts allowed before the host is banned. Set to 5 attempts by default. On UCM62xx/UCM6510 this setting can be configured under the global



settings as well (Priority to the value configured under the local setting) , While on the UCM63xx/A series this can be configured under the local settings only.

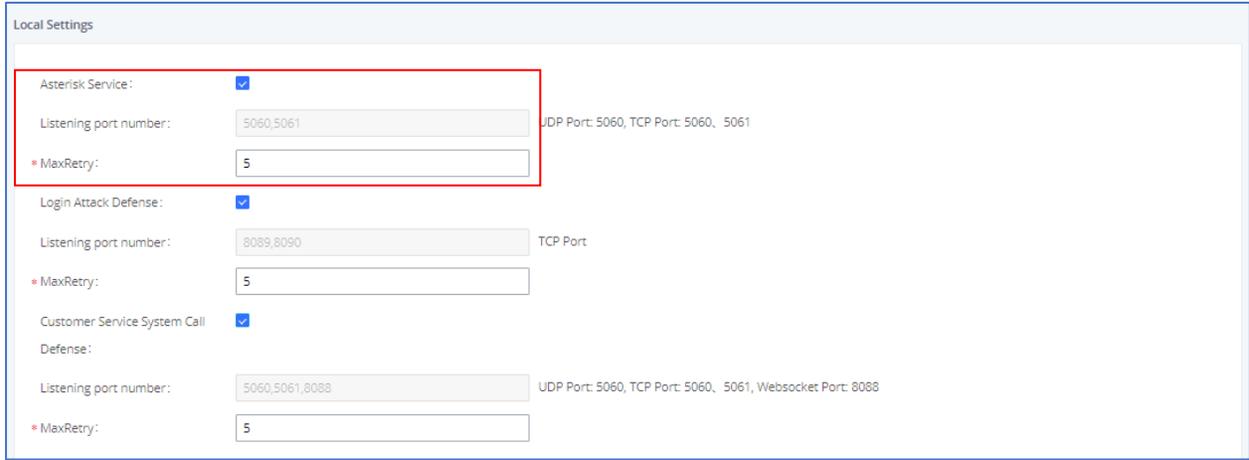

The screenshot shows the 'Local Settings' configuration page. It contains three main sections, each with a checked checkbox and a 'MaxRetry' field set to 5. The first section, 'Asterisk Service', is highlighted with a red box. Its 'Listening port number' field contains '5060,5061' and the associated ports are 'UDP Port: 5060, TCP Port: 5060, 5061'. The second section, 'Login Attack Defense', has a 'Listening port number' of '8089,8090' and 'TCP Port'. The third section, 'Customer Service System Call Defense', has a 'Listening port number' of '5060,5061,8088' and 'UDP Port: 5060, TCP Port: 5060, 5061, Websocket Port: 8088'.

Figure 24: Asterisk Service Fail2Ban setting

If Enable Fail2ban is ticked under the Global Settings section, either Asterisk Service, Login Attack Defense, Customer Service System Call Defense or all must be enabled under the Local Settings section. The MaxRetry values under these options will override the value set in the Global Settings section.

Asterisk Service - Protects against excessive failed SIP REGISTER, INVITE, and SUBSCRIBE requests. If the retry limit has been reached, the UCM will not respond to any more SIP requests from the same host. The Listening port number value will match the configured SIP port number in the PBX Settings→SIP Settings.

Login Attack Defense - Protects against excessive failed login attempts. If the retry limit has been reached, the UCM will prevent the host from accessing the UCM web UI. The Listening port value will match the configured port number in **System Settings→HTTP Server→Port**.

Customer Service System Call Defense (UCM63xx/A only) – Enable call defense in the customer service system. It Protects against excessive call generation when Click2Call feature is enabled. If the retry limit has been reached, the UCM will not respond to any more SIP requests from the same host.



AMI

Asterisk Manager Interface (AMI) is supported on UCM with restricted access. Please refer to the following link for detailed documentation on the feature:

http://www.grandstream.com/products/ucm_series/UCM/documents/UCM_ami_guide.pdf

It is highly recommended to not enable AMI on a UCM that is placed on a public or untrusted network unless precautions have been taken to prevent unauthorized access and restrict permissions. AMI access allows users to originate calls and view sensitive information on the UCM.

** Asterisk is a Registered Trademark of Digium, Inc.*

