



Grandstream Networks, Inc.

UCM6xxx series

SIP Trunks Guide



Table of Content

INTRODUCTION.....	4
REGISTER SIP TRUNKS	5
Configuration.....	5
DID / DOD Configuration	10
<i>Direct Inward Dialing (DID)</i>	10
<i>Direct Outward Dialing (DOD)</i>	11
Create Outbound/Inbound Routes.....	13
<i>Create Inbound Routes</i>	13
<i>Create Outbound Routes</i>	15
PEER TRUNK.....	16
Configuration.....	16
Outbound Routes Configuration	23
Inbound Routes Configuration	24
TIME CONDITION	26
FAILOVER TRUNK.....	28



Table of Figures

Figure 1: UCM6xxx Typical Scenario	4
Figure 2: Create New Register Trunk	6
Figure 3: Register Trunk.....	9
Figure 4: Register Trunk Status	10
Figure 5: Inbound Rule - ByDID	11
Figure 6: Create New DOD	12
Figure 7: DOD List	13
Figure 8: Register Inbound Route	14
Figure 9: Inbound Route name Field on UCM630x	14
Figure 10: Outbound Route Example	15
Figure 11: SIP Peer Trunk	16
Figure 12: Create New Peer Trunk	17
Figure 13: Edit Peer Trunk	22
Figure 14: Enable Qualify.....	22
Figure 15: Peer Trunk Status	23
Figure 16: PEER Trunk - Create New Outbound Rule	24
Figure 17: PEER Trunk - Create New Inbound Rule	25
Figure 18: Outbound Time Office	26
Figure 19: Out Of Office Time	27
Figure 20: Adding Failover Trunk	28

Table of Tables

Table 1: Register Trunk Parameters	7
Table 2: Extension/Trunk → VoIP Trunks.....	17
Table 3: Extension/Trunk → VoIP Trunks → Advanced Settings	19



INTRODUCTION

SIP trunks are a VoIP service that can be provided from an ITSP (Internet Telephony Service Provider) to extend telephony features beyond IPPBX local area. SIP trunks can carry voice calls, video calls, instant messages, multimedia conferences, and other SIP-based, real-time communications services.

Using SIP trunks helps to reduce call rates especially when making long distance calls, since VoIP providers can offer better calling rates compared to local ISP using analog lines.

UCM6xxx series support two types of SIP trunks: “Register SIP trunks”, mainly used to connect with provider’s trunk and “Peer trunks”, that can be used to interconnect multiple IP-PBXs. UCM6xxx series support up to 200 SIP trunks.

This guide describes needed configuration to set up register trunk (with provider) and peer trunk (between two UCM6xxx).

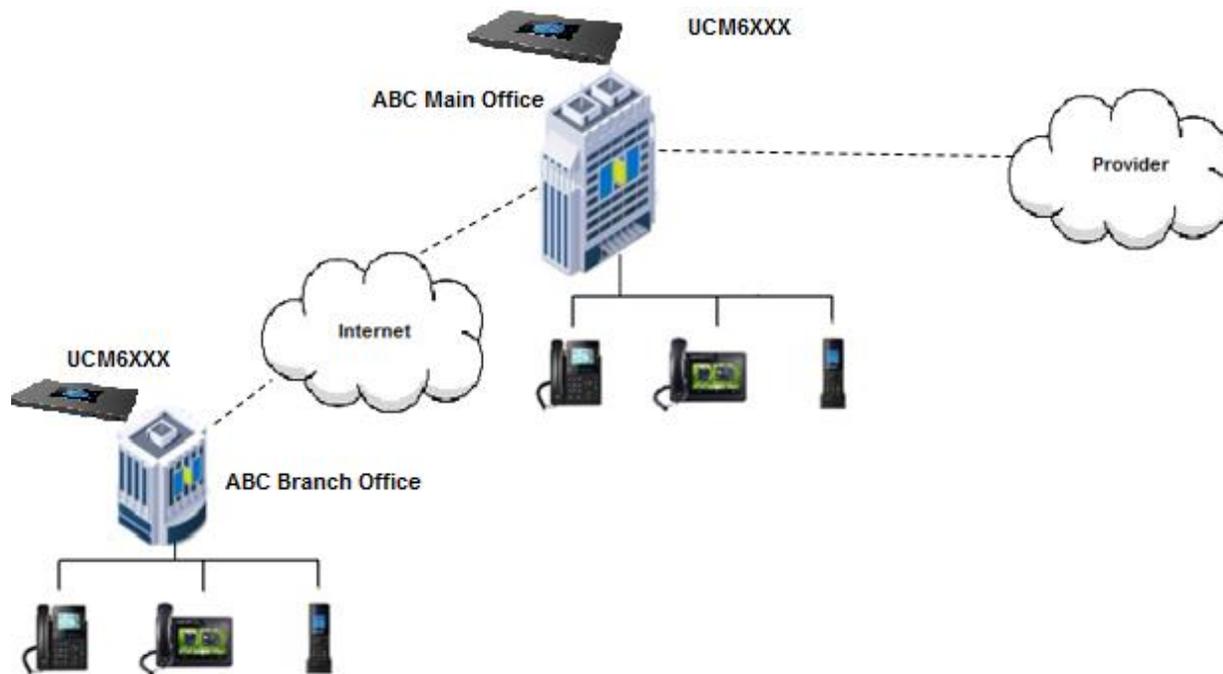


Figure 1: UCM6xxx Typical Scenario

The figure above shows a typical scenario using two UCM6xxx between main and branch offices (connected via peer trunk), and main office UCM6xxx connected to provider via register SIP trunk.

Note: UCM6XXX series include UCM620x series, UCM630x series, UCM630xA series and UCM6510.



REGISTER SIP TRUNKS

In this guide, we will take company ABC as example. The company has purchased two SIP trunks, the first one will be used for International calls, while the second will be used of national ones.

The ITSP provider gave following trunk information to the company ABC in order to register their trunks.

SIP trunk information	Value
SIP Trunk 1	
Provider address	sip.provider.com
Username	0655441000
Authenticate ID	0655441000
Password	admin123
Main number	0655441000
Provided DIDs	0655441001 / 0655441002 / 0655441003 / 0655441004 / 0655441005 / 0655441006 / 0655441007 / 0655441008 / 0655441009 / 0655441010
SIP Trunk 2	
Provider address	sip.provider.com
Username	0655441100
Authenticate ID	0655441100
Password	admin123
Main number	0655441100
Provided DIDs	0655441101 / 0655441102 / 0655441103 / 0655441104 / 0655441105 / 0655441106 / 0655441107 / 0655441108 / 0655441109 / 0655441110

Setup considerations:

- Extensions range on UCM6xxx in main office is 1000 – 1999.
- Dialing to international numbers should be prefixed with 99 with no size limits.
- National numbers start with 06 with 10-digit length.

Configuration

Below steps to configure SIP Trunk 1 on Main office UCM6xxx. Same steps apply to configure Trunk 2.

1. Access UCM6xxx web GUI → **Extension / Trunk** → **VoIP Trunks**.
2. Click on  , in the following screenshot type in Trunk 1 credentials:



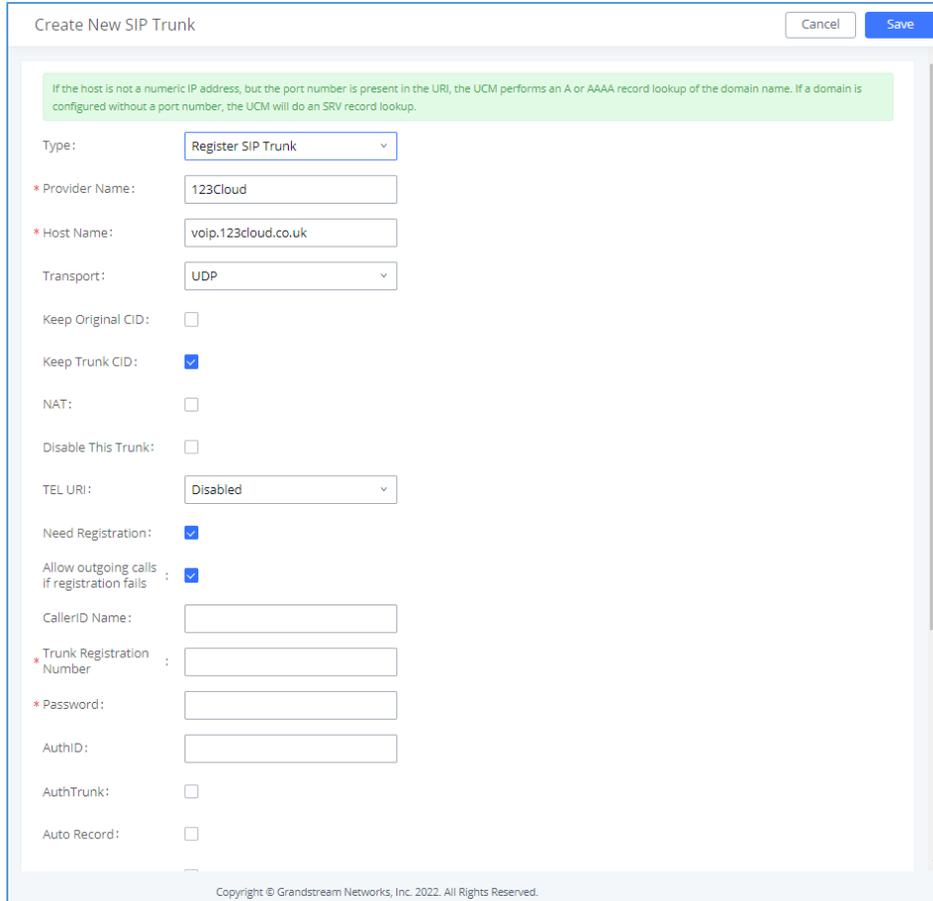


Figure 2: Create New Register Trunk

- Select “**Register SIP Trunk**” as Type.
 - Type in a reference name for **Provider Name**. For example: “Provider_1”.
 - Enter provider’s FQDN/IP address in **Host Name** field. In this example: “sip.provider.com”.
 - Enter **Username** to register to the provider. In this example: “0655441000”.
 - Enter **Authenticate ID** to register to the provider. In this example: “0655441000”.
 - Enter **Password** associated with username. In this example: “admin123”.
3. Click  and  to store and apply the configuration.

Above steps describe basic configuration needed to register a SIP trunk. Depending on providers, users may need to adjust their settings to successfully register a SIP trunk.

The table below describes main parameters available for Register SIP Trunks:



Table 1: Register Trunk Parameters

Fields	Description
Provider Name	Configure a unique label to identify the trunk when listed in outbound rules and incoming rules.
Host Name	Enter the IP address or hostname of the VoIP provider's server.
Transport	Configure the SIP Transport method. Using TCP requires local TCP support; using TLS requires local TLS support.
Auto Record	Enable automatic recording for the calls using this trunk (for SIP trunk only). The default setting is disabled. The recording files can be accessed under web GUI→CDR→Recording Files.
Keep Original CID	Keep the CID from the inbound call when dialing out. This setting will override "Keep Trunk CID" option. Please make sure that the peer PBX at the other side supports to match user entry using "username" field from authentication line.
Keep Trunk CID	<p>If enabled, the trunk CID will not be overridden by extension's CID when the extension has CID configured. The default setting is "No".</p> <p>If enabled and Keep Original CID is disabled, the callee will see the ID set on Username field of UCM6xxx, in this case "0655441000".</p>
NAT	Turn on this option when the PBX is using public IP and communicating with devices behind NAT. If there is one-way audio issue, usually it's related to NAT configuration or SIP/RTP port configuration on the firewall.
Disable This Trunk	<p>If selected, the trunk will be disabled.</p> <p>Note: If a current SIP trunk is disabled, UCM6xxx will send UNREGISTER message (REGISTER message with expires=0) to the SIP provider.</p>
TEL URI	<p>If the trunk has an assigned PSTN telephone number, this field should be set to "User=Phone". Then a "User=Phone" parameter will be attached to the Request-Line and TO header in the SIP request to indicate the E.164 number. If set to "Enable", "Tel:" will be used instead of "SIP:" in the SIP request. The default setting is disabled.</p> <ul style="list-style-type: none"> If set to Disabled, the TO header in this example will be "To: <sip:0655441000@sip.provider.com>". If set to User=Phone, the TO header in this example will be "To: <sip: 0655441000@ sip.provider.com;user=phone>". If set to Enabled, the TO header in this example will be "To: <tel: 0655441000>".
Need Registration	Select whether the trunk needs to register on the external server or not when "Register SIP Trunk" type is selected.




Allow outgoing calls if registration failure	<p>If enabled outgoing calls even if the registration to this trunk fail will still be able to go through.</p> <p>Note that if we uncheck "Need Registration" option, this option will be ignored.</p>
CallerID Name	<p>Configure the Caller ID name that will be sent on the from header in INVITE message</p> <p><u>Example:</u></p> <p>Caller ID set to "GSTest", the "From" header will be:</p> <p><i>From: "GSTest" <sip:0655441000@ucm1.abc.com>;tag=f268</i></p>
From Domain	<p>Configure the actual domain where the extension comes from.</p> <p><u>Example:</u> If set to "gs.test.com", the "From" header will be as shown below:</p> <p><i>From: <sip:0655441000@gs.test.com>;tag=f268</i></p>
From User	<p>Configure the actual user name of the extension.</p> <p><u>Example:</u> If set to "0655447777", it will override username in "From" header as shown below:</p> <p><i>From: <sip: 0655447777@gs.test.com>;tag=f268</i></p>
Username	<p>Enter the username to register to the trunk from the provider when "Register SIP Trunk" type is selected.</p> <p>Important Note: When making outgoing calls, the following priority order rule will be used to determine which CallerID will be set before sending out the call:</p> <ul style="list-style-type: none"> From user (Register Trunk Only) → CID from inbound call (Keep Original CID Enabled) → Trunk Username/CallerID (Keep Trunk CID Enabled) → DOD → Extension CallerID Number → Trunk Username/CallerID (Keep Trunk CID Disabled) → Global Outbound CID.
Password	<p>Enter the password to register to the trunk from the provider when "Register SIP Trunk" is selected.</p>
Auth ID	<p>Enter the authentication ID for "Register SIP Trunk" type.</p> <p>Note: This is the SIP service subscriber's ID used for authentication. If not configured the Extension Number will be used for authentication.</p>
AuthTrunk	<p>If enabled, the UCM will send 401 response to the incoming call to authenticate the trunk.</p>
Auto Record	<p>Enable automatic recording for the calls using this trunk (for SIP trunk only). The default setting is disabled. The recording files can be accessed under web GUI→CDR→Recording Files.</p>
Jitter Buffer (UCM630x only)	<p>Select jitter buffer method for temporary accounts such as meeting participants who joined via link.</p>



	<ul style="list-style-type: none"> • Disable: Jitter buffer will not be used. • Fixed: Jitter buffer with a fixed size (equal to the value of "Jitter Buffer Size") • Adaptive: Jitter buffer with an adaptive size that will not exceed the value of "Max Jitter Buffer"). • NetEQ: Dynamic jitter buffer via NetEQ.
Direct Callback	Allows external numbers the option to get directed to the extension that last called them.
RemoteConnect Mode (UCM630x/A only)	If enabled, RemoteConnect-related options will be automatically configured. Please confirm the trunk is a GDMS-assigned address or supports TLS.
Enable Concurrent Call Alert (UCM630x/A only)	If enabled and when the number of concurrent calls exceeds any trunk's configured concurrent call thresholds, an alarm notification will be generated. Note: Please make sure the system alert event "Trunk Concurrent Calls" is enabled.
Concurrent Call Threshold (UCM630x/A only)	Threshold of all incoming and outgoing concurrent calls through this trunk. Please enter a value between 1 and 200.
Outgoing Concurrent Call Threshold (UCM630x/A only)	Threshold of all outgoing concurrent calls passing through this trunk. Please enter a value between 1 and 200.
Incoming Concurrent Call Threshold (UCM630x/A only)	Threshold of all incoming concurrent calls passing through this trunk. Please enter a value between 1 and 200.

After saving the new VoIP trunk, it will be displayed under **Web UI → Extension / Trunk → VoIP Trunks** as shown below. Press  to edit trunk settings if needed.

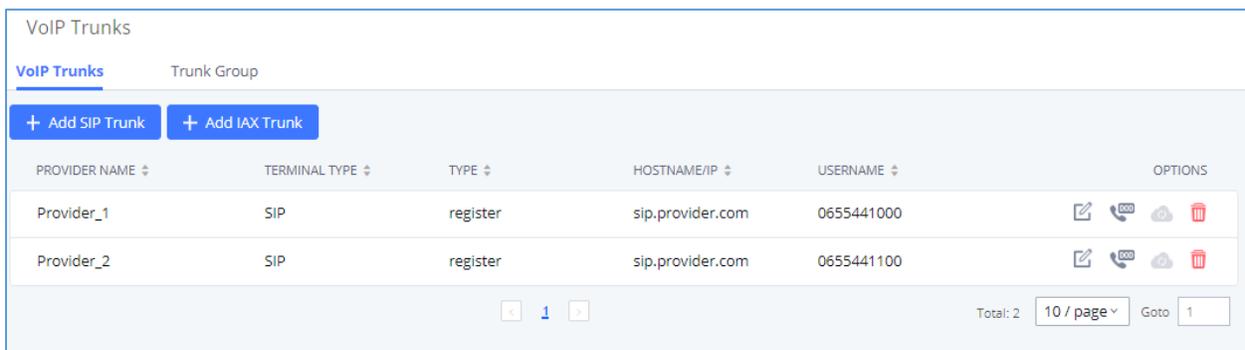

PROVIDER NAME	TERMINAL TYPE	TYPE	HOSTNAME/IP	USERNAME	OPTIONS
Provider_1	SIP	register	sip.provider.com	0655441000	   
Provider_2	SIP	register	sip.provider.com	0655441100	   

Total: 2 10 / page Goto 1

Figure 3: Register Trunk

Once the trunk has been created, users can check its registration status under **System Status →**



Dashboard page.

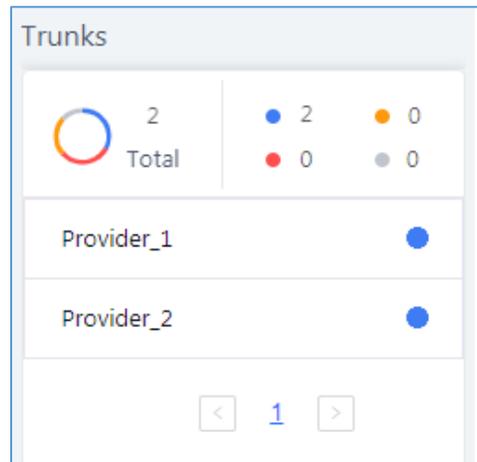


Figure 4: Register Trunk Status

Note: If status shows “Rejected”, it means that UCM6xxx didn’t get registered with the provider. Verify that provider’s server is reachable from UCM6xxx and double confirm trunk credentials.

DID / DOD Configuration

Direct Inward Dialing (DID)

DID (Direct Inward Dialing) is a service provided by the ITSP to subscribers using IP-PBX, adding possibility to route incoming calls to a specific DID to a specific extension. Using DIDs, it will allow extensions to be reachable from outside directly without going through main office number.

In this example, following DIDs have been provided with first trunk “Provider_1”: 0655441000 / 0655441001 / 0655441002 / 0655441003 / 0655441004 / 0655441005 / 0655441006 / 0655441007 / 0655441008 / 0655441009 / 0655441010.

Company wants to redirect incoming calls to specific extensions using provided DIDs. UCM6xxx in main office is using extensions range: 1000 – 1999.

Note: Make sure **DID Mode** is set correctly under trunk advanced settings. Provider may include DID number in “Request-line” or “To-header”.

Following configuration can be done to achieve this:

1. Access UCM6xxx Web UI → **Extension/Trunk** → **Inbound Routes**. Select “Trunk 1” and press “**Add**” button.
2. In **DID Pattern** field, enter “_0655441XXX”.
3. Configure **ByDID** as **Default Destination** and check “Extension” in “DID Destination” options.
4. Configure **Strip** field. In this example: Strip=6 to remove first 6 digits from incoming number and keep last 4 digits. If call is coming to 0655441007, UCM6xxx will strip 065544 and keep 1007.



5. Click **Save** and **Apply Changes** to apply configuration.

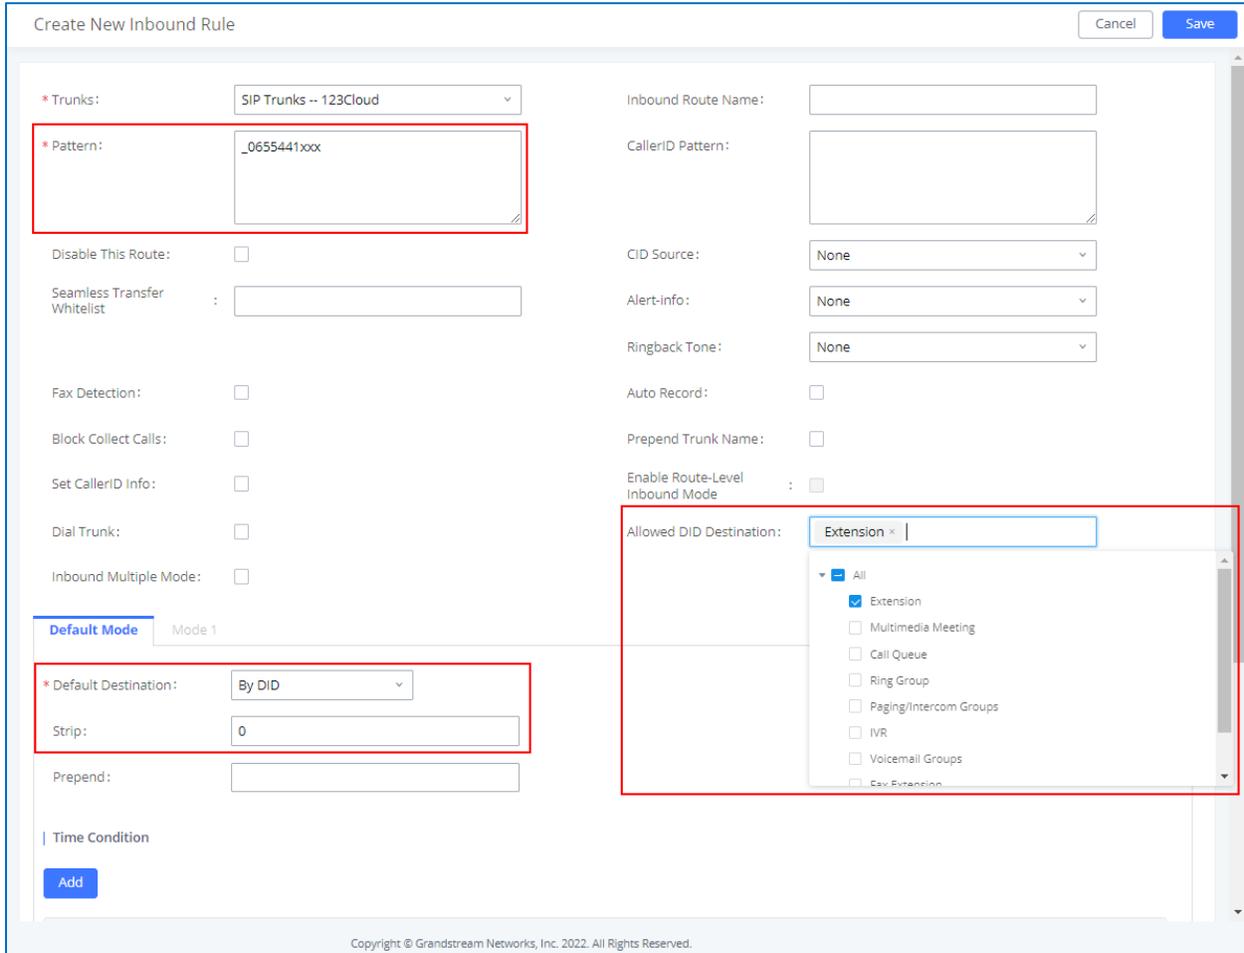


Figure 5: Inbound Rule - ByDID

Direct Outward Dialing (DOD)

The UCM6xxx provides Direct Outward Dialing (DOD) which is a service of a local phone that allows extensions within a company ABC's UCM to connect to outside lines directly.

We will use Company's ABC trunk 0655441000 with 11 DIDs associated to it. At the moment when a user makes an outbound call their caller ID shows up as the main office number which is 0655441000. This create a problem as the CEO would like that his calls to comes from his direct line. This can be accomplished by configuring DOD for the CEO's extension. Other group member also can benefit from DOD to have their own line showed when making calls.

Steps on how to configure DOD on the UCM6xxx:

1. To setup DOD go to UCM6xxx Web UI → **Extension/Trunk** → **VoIP Trunks** page.
2. Click  to access the DOD options for the selected SIP Trunk.



3. Click "+ Add DOD" to begin your DOD setup.
4. For "DOD Number", enter one of the numbers (DIDs) from your SIP trunk provider. In this example, we will enter in the number for the CEO's direct line (0655441000).
5. If extension number need to be appended to the DID number click on "Add Extension".
6. Select an extension from the "Available Extensions" list. Users have the option of selecting more than one extension. In this case, we would select the CEO's extension. After making the selection, click on the  button to move the extension(s) to the "Selected Extensions" list.
7. Click  and  to apply configuration.

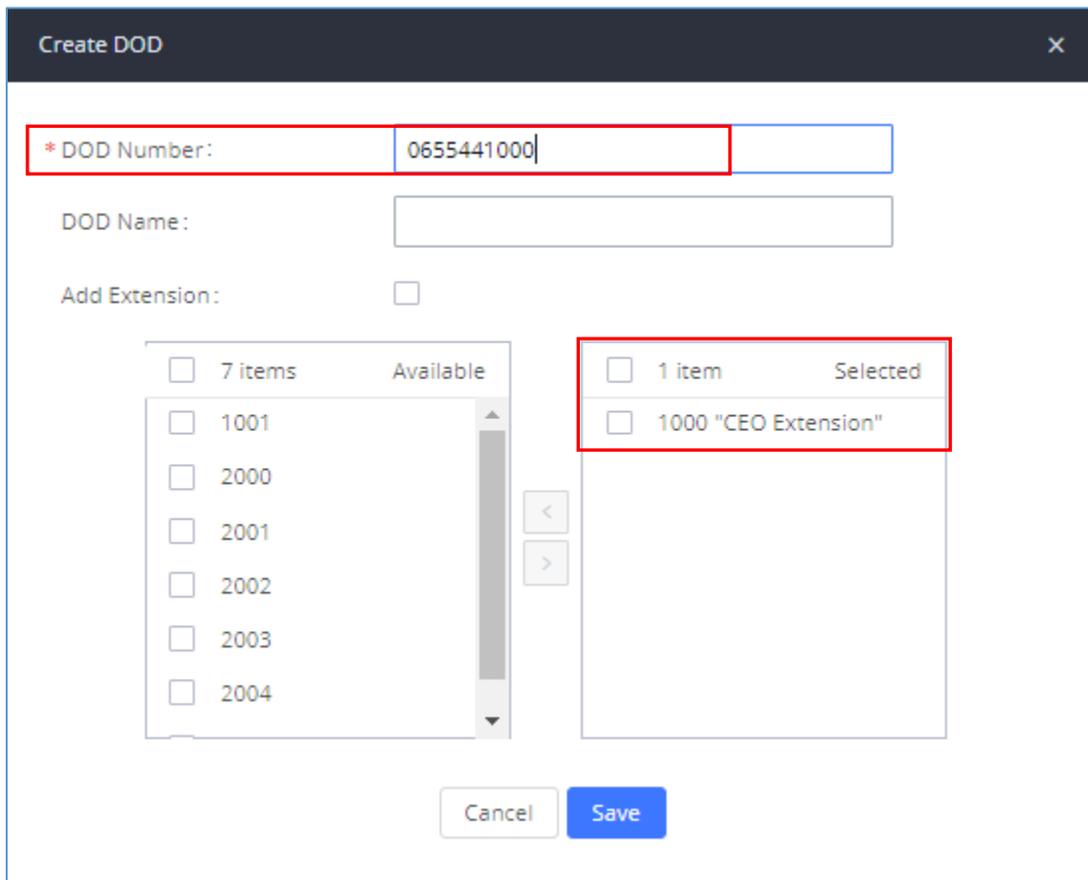


Figure 6: Create New DOD

Users can press "Edit DOD" to check/add/delete extensions that are associated to a particular DOD.



< DOD

Direct Outward Dialing (DOD) is a service of a local phone company or local exchange carrier that allows subscribers within a company's PBX system to connect to outside lines directly.

[+ Add DOD](#)

DOD	DOD NAME	EXTENSIONS	OPTIONS
0655441001		1001 1002	 
0655441005		1004 2000	 
0655441010		1000	 

Total: 3 10 / page Goto 1

Figure 7: DOD List

Create Outbound/Inbound Routes

In this section we will give an example of creating Outbound and Inbound Rules for trunk 1 “Provider_1” to allow receiving incoming calls and to be redirected to IVR and to allow outgoing calls to be made.

Create Inbound Routes

1. Access UCM6xxx Web UI → **Extension/Trunk** → **Inbound Routes**. Select “Trunk 1” and press “**+ Add**”.
2. In **DID Pattern** field, enter “**_X**”. This allows all incoming calls to be received.
3. Set **IVR** as **Default Destination**. (Assuming IVR is pre-configured).
4. Click [Save](#) and [Apply Changes](#) to apply configuration.



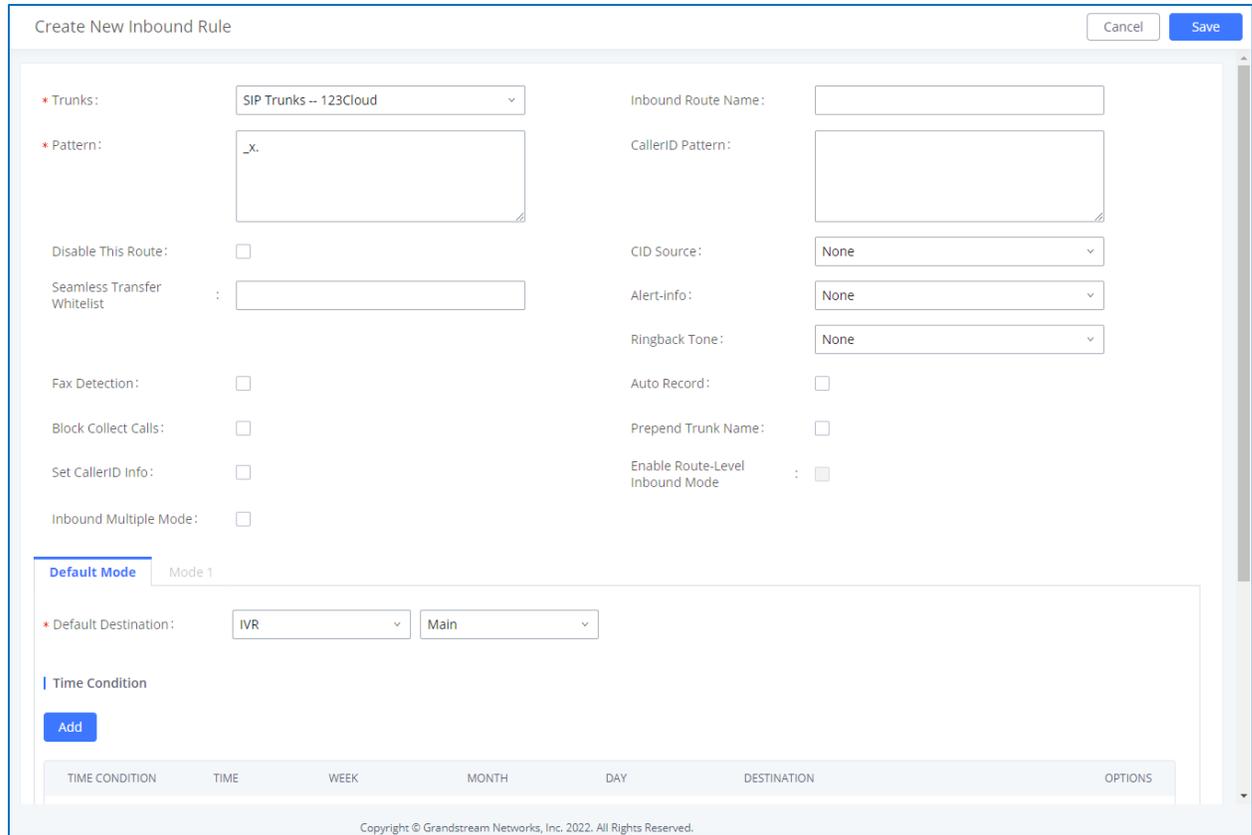


Figure 8: Register Inbound Route

Notes: On UCM630x series, you can also configure the name of the Inbound Route Name, it is optional.

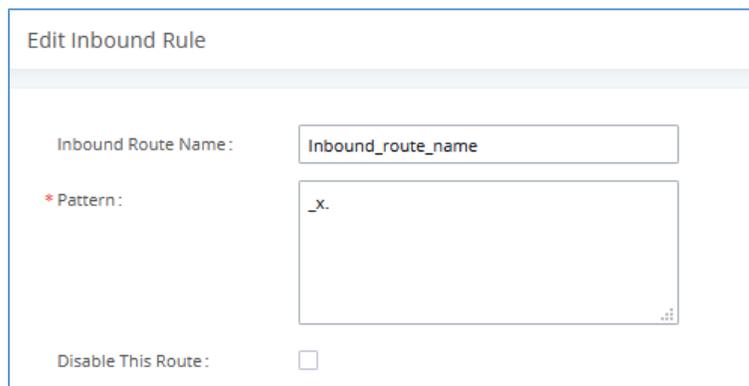


Figure 9: Inbound Route name Field on UCM630x

Notes:

- As for time condition based inbound route, please refer to section **TIME CONDITION**.
- **Special ringing tone** option is called **Ringback tone** on the UCM63xx series.



Create Outbound Routes

1. Go to **Web UI → Extension/Trunk → Outbound Routes**.
2. Click on “+ **Add**” button to create a new outbound route.
3. Enter the **Calling Rule Name, Pattern** and choose “Provider_1” in **Use Trunk**.

In below figure, we set “Pattern” to “_06XXXXXXXX” to allow only dialed numbers with leading 06 and 10-digit length to be accepted. Extensions with privilege “Internal” or higher can use this route/trunk.

Note: Users can add comments to a dial plan by typing “/” and “*/” before and after each comment respectively, in our example we can set the pattern to: “_06XXXXXXXX /*route1*/ ”

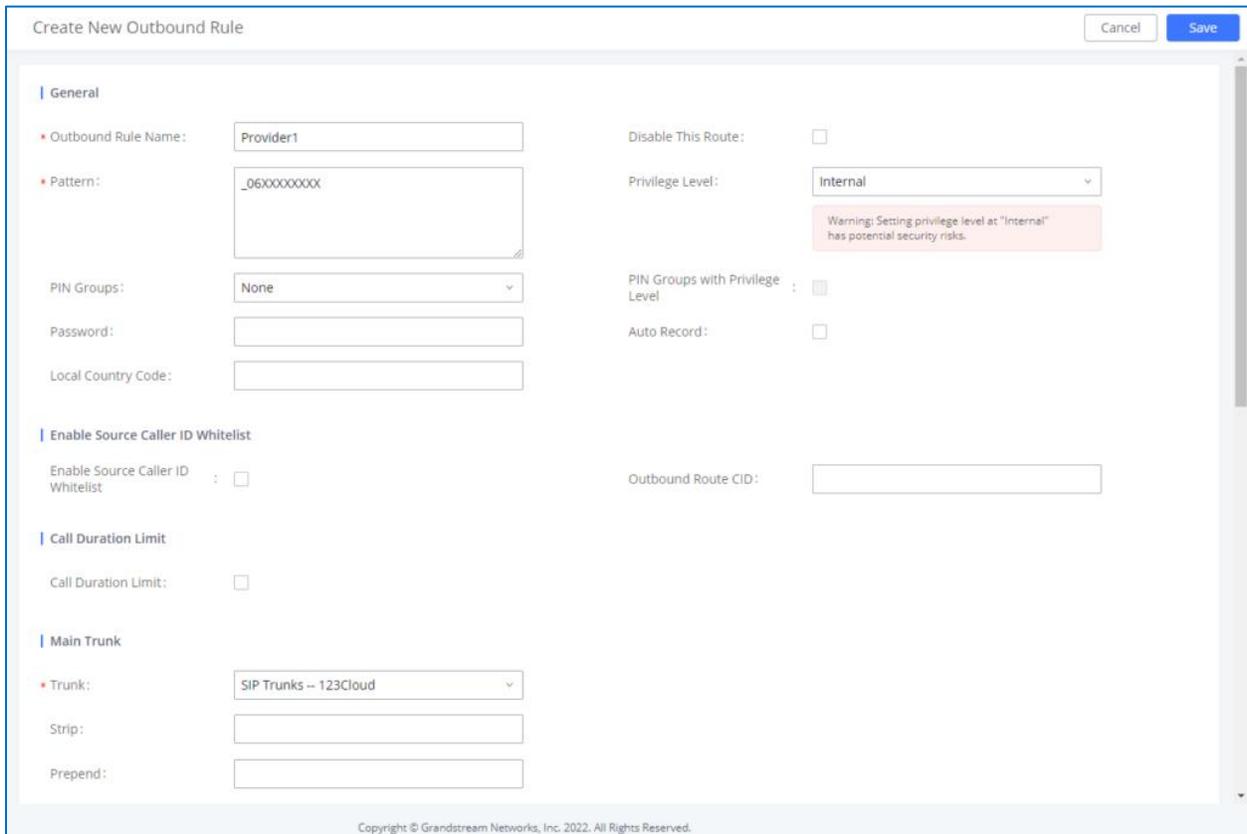


Figure 10: Outbound Route Example

Another outbound route should be set using “Provider_2” with following parameters:

- **Pattern:** “_99X.” (to allow only dialed numbers with leading 99 to be authorized).
- **Privilege:** International for instance.
- **Strip:** “2” (to remove prefix 99 before calling out).

To dial international numbers such as 0016175669300, users need to have privilege “International” in used extension and dial 990016175669300.

Note: For time condition based Outbound Routes, please refer to **TIME CONDITION**.



PEER TRUNK

In this chapter, we will consider that company ABC has a branch office equipped with UCM6xxx, and they want to be able to communicate between the two offices.

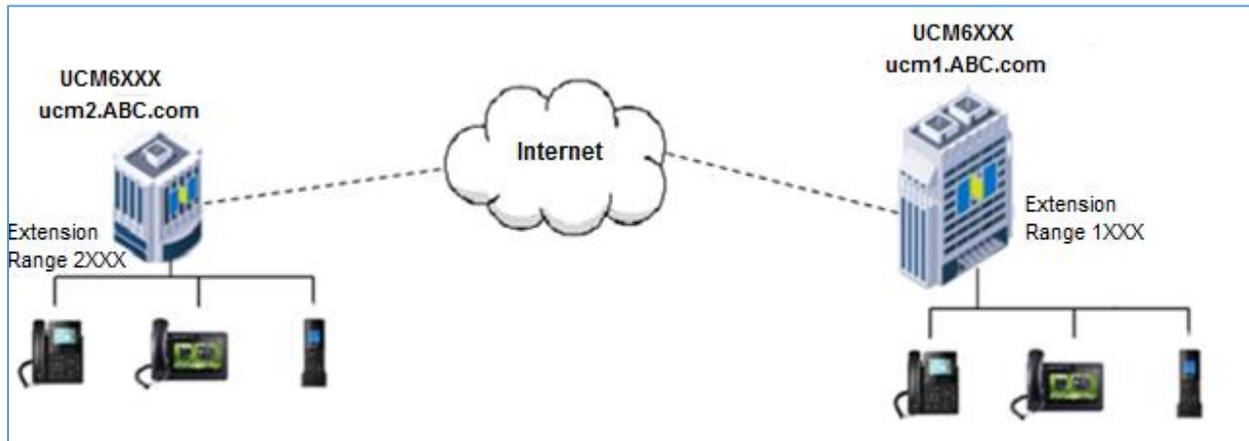


Figure 11: SIP Peer Trunk

Assuming following:

- Both UCM6xxxs have public IP addresses.
- Or both UCM6xxx are on the same LAN/VPN using private or public IP addresses.
- Or both UCM6xxx can be connected through a router using public or private IP addresses (with necessary port forwarding or DMZ).
- UCM6xxx in main office is using extensions range 1XXX, while UCM6xxx in branch office is using extensions range 2XXX.

Configuration

Following steps need to be done on both UCM6xxx in both locations:

1. Access UCM6xxx's web GUI → **Extension / Trunk** → **VoIP Trunks**.
2. Click on **+ Add SIP Trunk**, and enter following parameters:
 - Select "Peer SIP Trunk" for Type.
 - Enter a reference name. In this example: **toBranch**.
 - In **Host Name** field, enter the IP address/domain of the other UCM6xxx. In this case "ucm2.abd.com" is the domain name of the branch office.
3. Click **Save** and **Apply Changes** to apply configuration.



Create New SIP Trunk
Cancel Save

If the host is not a numeric IP address, but the port number is present in the URI, the UCM performs an A or AAAA record lookup of the domain name. If a domain is configured without a port number, the UCM will do an SRV record lookup.

Type:

* Provider Name:

* Host Name:

Transport:

Keep Original CID:

Keep Trunk CID:

NAT:

Disable This Trunk:

TEL URI:

CallerID Number:

CallerID Name:

Auto Record:

Direct Callback:

RemoteConnect Mode:

Monitor Concurrent Calls:

Consistent Call:

Copyright © Grandstream Networks, Inc. 2022. All Rights Reserved.

Figure 12: Create New Peer Trunk

The tables below describe basic and advanced parameters available for PEER trunks:

Table 2: Extension/Trunk → VoIP Trunks

Field	Description
Provider Name	Configure a unique label to identify the trunk when listed in outbound rules and incoming rules.
Host Name	Enter the IP address or hostname of the VoIP provider's server.
Transport	Configure the SIP Transport method. Using TCP requires local TCP support; using TLS requires local TLS support.
Auto Record	Enable automatic recording for the calls using this trunk (for SIP trunk only). The default setting is disabled. The recording files can be accessed under web GUI->CDR->Recording Files



Keep Original CID	<p>Keep the CID from the inbound call when dialing out. This setting will override “Keep Trunk CID” option. Please make sure that the peer PBX at the other side supports to match user entry using “username” field from authentication line.</p> <ul style="list-style-type: none"> • If enabled, user at extension 1000 will see 2000 as UserID.
Keep Trunk CID	<p>If enabled, the trunk CID will not be overridden by extension’s CID when the extension has CID configured. The default setting is “No”.</p> <ul style="list-style-type: none"> • If enabled and Keep Original CID is disabled, user at extension 1000 will see the ID set on Caller ID field.
NAT	<p>Turn on this setting when the PBX is using public IP and communicating with devices behind NAT. If there is one-way audio issue, usually it is related to NAT configuration or SIP/RTP port support on the firewall.</p>
Disable This Trunk	<p>If checked, the trunk will be disabled. Note: If a current SIP trunk is disabled, UCM will send UNREGISTER message (REGISTER message with expires=0) to the SIP provider.</p>
TEL URI	<p>If the trunk has an assigned PSTN telephone number, this field should be set to “User=Phone”. Then a "User=Phone" parameter will be attached to the Request-Line and TO header in the SIP request to indicate the E.164 number. If set to "Enable", "Tel:" will be used instead of "SIP:" in the SIP request. The default setting is disabled.</p> <ul style="list-style-type: none"> • If TEL URI is set to Disabled, the TO header will be “To: <sip:1000@ucm1.abc.com>”. • If TEL URI is set to User=Phone, the TO header will be “To: <sip:1000@ucm1.abc.com;user=phone>”. • If TEL URI is set to Enabled, the TO header will be “To: <tel:1000>”.
Caller ID Number	<p>Configure the Caller ID. This is the number that the trunk will try to use when making outbound calls. For some providers, it might not be possible to set the CallerID with this option and this option will be ignored.</p> <p>Important Note: When making outgoing calls, the following priority order rule will be used to determine which CallerID will be set before sending out the call :</p> <ul style="list-style-type: none"> • CID from inbound call (Keep Original CID Enabled) → Trunk Username/CallerID (Keep Trunk CID Enabled) → DOD → Extension CallerID Number → Trunk Username/CallerID (Keep Trunk CID Disabled) → Global Outbound CID.
Caller ID Name	<p>Configure the name of the caller to be displayed when the extension has no CallerID Name configured.</p> <p>Note: This Option needs Keep Trunk CID Feature enabled</p> <ul style="list-style-type: none"> • If the Caller ID Name is set on the trunk, the “From” header will include this name as shown below: From: "GSTest" <sip:2000@ ucm2.abc.com >;tag=f268



From Domain	Configure the actual domain where the extension comes from.
Jitter Buffer (UCM630x/A only)	Select jitter buffer method for temporary accounts such as meeting participants who joined via link. <ul style="list-style-type: none"> • Disable: Jitter buffer will not be used. • Fixed: Jitter buffer with a fixed size (equal to the value of "Jitter Buffer Size") • Adaptive: Jitter buffer with an adaptive size that will not exceed the value of "Max Jitter Buffer"). • NetEQ: Dynamic jitter buffer via NetEQ.
Direct Callback	Allows external numbers the option to get directed to the extension that last called them.
RemoteConnect Mode (UCM630x/A only)	If enabled, RemoteConnect-related options will be automatically configured. Please confirm the trunk is a GDMS-assigned address or supports TLS.
Enable Concurrent Call Alert (UCM630x/A only)	If enabled and when the number of concurrent calls exceeds any trunk's configured concurrent call thresholds, an alarm notification will be generated. Note: Please make sure the system alert event "Trunk Concurrent Calls" is enabled.
Concurrent Call Threshold (UCM630x/A only)	Threshold of all incoming and outgoing concurrent calls through this trunk. Please enter a value between 1 and 200.
Outgoing Concurrent Call Threshold (UCM630x/A only)	Threshold of all outgoing concurrent calls passing through this trunk. Please enter a value between 1 and 200.
Incoming Concurrent Call Threshold (UCM630x/A only)	Threshold of all incoming concurrent calls passing through this trunk. Please enter a value between 1 and 200.

Table 3: Extension/Trunk → VoIP Trunks → Advanced Settings

Fields	Description
Codec Preference	Select audio and video codec for the VoIP trunk. The available codecs are: PCMU, PCMA, GSM, AAL2-G.726-32, G.726, G.722, G.729, G.723, iLBC, ADPCM, H.264, H.263, H.263p. <ul style="list-style-type: none"> • The selected codecs will be sent on the SDP field from top to bottom to the other UCM in order to negotiate the codec to use during the call.
Send PPI Header	If enabled, the SIP INVITE message sent to the trunk will contain PPI (P-Preferred-Identity) header. The default setting is "No".



	<p>Note: “Send PPI Header” and “Send PAI Header” cannot be enabled at the same time. Only one of the two headers is allowed to be contained in the SIP INVITE message.</p> <p>If enabled the SIP header will contain the following: P-Preferred-Identity: sip:2000@ ucm2.abc.com</p> <p>This feature is needed by the provider “some providers use PPI others use PAI”</p>
Send PAI Header	<p>If enabled, the SIP INVITE message sent to the trunk will contain PAI (PAsserted-Identity) header. The default setting is “No”. Note: “Send PPI Header” and “Send PAI Header” cannot be enabled at the same time. Only one of the two headers is allowed to be contained in the SIP INVITE message.</p> <p>If enabled the SIP header will contain the following: P-Asserted-Identity: sip:2000@ucm2.abc.com</p> <p>This feature is needed by the provider “some providers use PPI others use PAI”</p>
Passthrough PAI Header	<p>If enabled and "Send PAI Header" is disabled, PAI headers will be preserved as calls pass through the UCM.</p>
Send PANI Header (UCM630X/A only)	<p>If checked, the INVITE sent to the trunk will contain P-Access-Network-Info header.</p>
Send Anonymous (UCM630x/A only)	<p>If checked, the "From" header in outgoing INVITE message will be set to anonymous.</p>
DID Mode	<p>Configure where to get the destination ID of an incoming SIP call, from SIP Request-line or To-header. The default is set to "Request-line".</p> <ul style="list-style-type: none"> • If set to Request-line, the UCM will extract the ID from the Request-Line of the incoming INVITE and set it on the “To header” for the outgoing one. • If set to To-Header, the UCM will extract the ID from the To-Header of the incoming INVITE and set it on the “To header” for the outgoing one.
DTMF Mode	<p>Configure the default DTMF mode when sending DTMF on this trunk.</p> <ul style="list-style-type: none"> • Default: The global setting of DTMF mode will be used. The global setting for DTMF Mode setting is under web UI->PBX->SIP Settings- >ToS. • RFC2833: Send DTMF using RFC2833. • Info: Send DTMF using SIP INFO message. • Inband: Send DTMF using inband audio. This requires 64-bit codec, i.e., PCMU and PCMA. • Auto: Send DTMF using RFC2833 if offered. Otherwise, inband will be used.
Enable Heartbeat Detection	<p>If enabled the UCM will send regularly SIP OPTIONS to check if the device is online.</p>



Heartbeat Frequency	When "Enable Heartbeat Detection" option is set to "Yes", configure the interval (in seconds) of the SIP OPTIONS message sent to the device to check if the device is still online. The default setting is 60 seconds.
Maximum Number of Call Lines	The maximum number of concurrent calls using the trunk. The default settings 0, which means no limit.
Packet Loss Retransmission (UCM630x/A only)	Configure to enable Packet Loss Retransmission.
Audio FEC (UCM630x/A only)	Configure to enable Forward Error Correction (FEC).
Video FEC (UCM630x/A only)	Enables Video FEC.
ICE Support (UCM630x only)	Toggles ICE support. For peer trunks, ICE support will need to be enabled on the other end.
FECC (UCM630x/A only)	Enable for Remote Camera Management.
SRTP	Enable SRTP for the VoIP trunk. The default setting is "No". <ul style="list-style-type: none"> If enabled it will provide encryption, message authentication and integrity for the Audio stream.
IPVT Mode	Configures the UCM to be used exclusively for IPVT. Warning: This will lock out certain UCM features.
Sync LDAP Enable	If enabled, the local UCM6xxx will automatically provide and update the local LDAP contacts to the remote UCM6xxx SIP peer trunk. In order to ensure successful synchronization, the remote UCM6xxx peer also needs to enable this option on the SIP peer trunk. The default setting is "No". <ul style="list-style-type: none"> Password and Ports need to be the same on both UCM's in order to synchronize LDAP data. Please refer to UCM6xxx User Manual for more detail about this feature.
Enable T.38 UDPTL (UCM630x/A only)	Enables or disables T.38 UDPTL support.
STIR/SHAKEN (UCM630x/A only)	Blocks Spam Calls.
Enable CC	If enabled, the system will automatically alert the user when a called party is available, given that a previous call to that party failed for some reason. <ul style="list-style-type: none"> For more information about this feature please refer to the Busy Camp On Guide.

After clicking Save, the new VoIP trunk will be displayed under “**Web UI → Extension / Trunk > VoIP Trunks**” as shown below.



VoIP Trunks					
VoIP Trunks		Trunk Group			
+ Add SIP Trunk		+ Add IAX Trunk			
PROVIDER NAME	TERMINAL TYPE	TYPE	HOSTNAME/IP	USERNAME	OPTIONS
To_Branch	SIP	peer	ucm2.abc.com		
					Total: 1 10 / page Goto 1

Figure 13: Edit Peer Trunk

Press  and go to “Advanced Settings”. Check “**Enable Heartbeat Detection**” option to allow UCM6xxx to monitor the status of each other sending regularly SIP OPTIONS to check if it’s still online.

Edit SIP Trunk: To_Branch Cancel Save

Basic Settings **Advanced Settings**

Features

Send PPI Header:

Send PAI Header:

Passthrough PAI Header:

Send PANI Header:

Send Anonymous:

DID Mode: Request-line

DTMF Mode: Default

Enable Heartbeat Detection:

* Heartbeat Frequency (s): 60

* The Maximum Number of Call Lines: 0

Sync LDAP Enable:

STIR/SHAKEN: Disabled

CC Settings

Enable CC:

Copyright © Grandstream Networks, Inc. 2022. All Rights Reserved.

Figure 14: Enable Qualify

Click Save and Apply Changes to apply configuration.

Once the trunk has been created and Enable Heartbeat Detection is set, users can view the status of the peered trunk by navigating to the **Status** page.



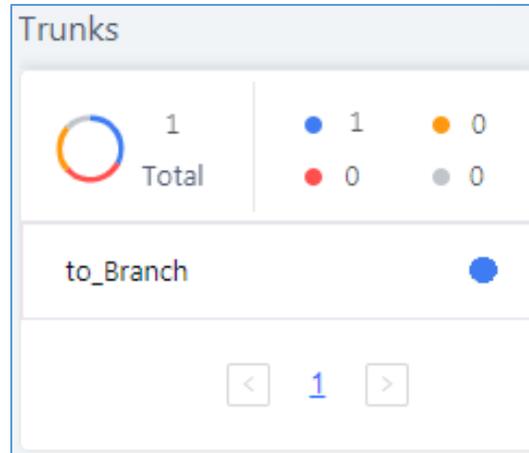


Figure 15: Peer Trunk Status

Outbound Routes Configuration

On the main office UCM6xxx web GUI under “**Web UI → Extension/Trunk → Outbound Routes**”, click on [+ Add](#). This would allow the extensions on main office to reach extensions on Branch Office.

Configure using following parameters:

1. **Calling Rule Name:** This is for reference purposes so we choose to use “toBranch”.
2. **Pattern:** The pattern used in this example is `_2XXX` since the Branch Office is using extension range 2XXX.
3. **Privilege Level:** Configured as “Internal”. User can change it to another privilege depending on the use case.
4. **User Trunk:** Select the SIP Trunk toBranch.
5. Click on [Save](#) then [Apply Changes](#).

In figure 15, the pattern “`_2XXX`” means that whenever a user on the main office call an extension that starts with 2 and have 4 digits, this trunk will be used for the call.



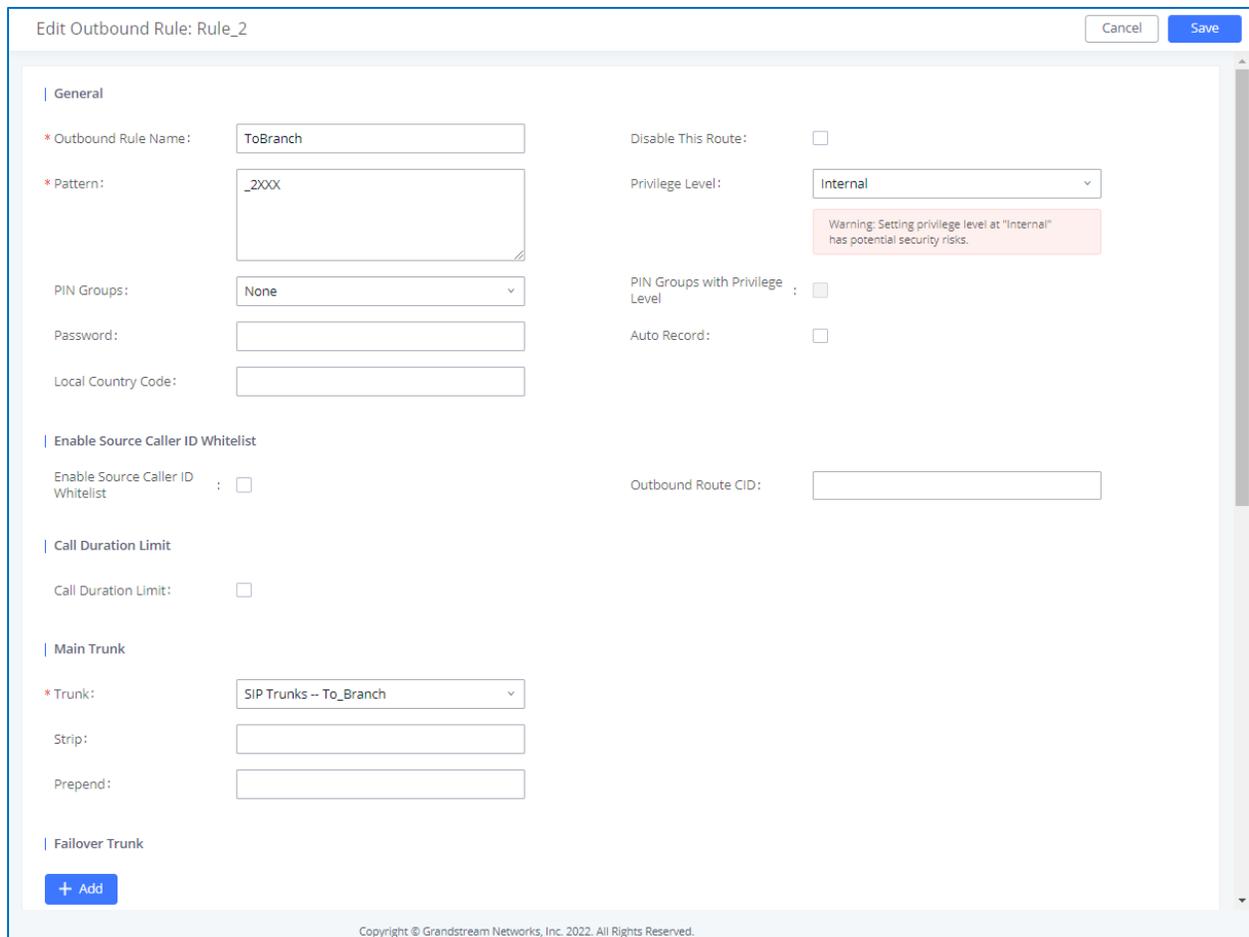


Figure 16: PEER Trunk - Create New Outbound Rule


Notes:

- These steps will also apply when configuring the outbound route from Branch Office UCM6xxx. The pattern used will be _1XXX since the extension range on the Main Office is 1XXX.
- Users also could create Time based Condition to use Outbound Routes on a specific time, please refer to TIME CONDITION for more details.

Inbound Routes Configuration

To create an inbound rule, on the UCM webGUI, under “**Web UI → Extension/trunk → Inbound Routes**” click on  button.

For this example, Main Office UCM6xxx inbound rule needs to be configured so that when an extension on the Branch Office dials, it will be routed to the specified user. Configure using following parameters:

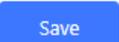1. **Trunks:** Select the **toBranch** trunk.
2. **DID Pattern:** Enter in the pattern “_1XXX” | “_2XXX” as shown in below figure.
3. **DID Destination:** By DID.
4. Click on  then .



Create New Inbound Rule
Cancel Save

* Trunks:

* Pattern:

Disable This Route:

Seamless Transfer Whitelist:

Fax Detection:

Block Collect Calls:

Set CallerID Info:

Dial Trunk:

Inbound Multiple Mode:

Inbound Route Name:

CallerID Pattern:

CID Source:

Alert-info:

Ringback Tone:

Auto Record:

Prepend Trunk Name:

Enable Route-Level Inbound Mode:

Allowed DID Destination:

Default Mode Mode 1

* Default Destination:

Strip:

Prepend:

Time Condition

Add

Copyright © Grandstream Networks, Inc. 2022. All Rights Reserved.

Figure 17: PEER Trunk - Create New Inbound Rule

With this inbound rule configured, if the Main Office UCM6xxx receives a call from any extension with a leading 2 and containing 4 digits to any extension with a leading 1 and contains 4 digits it will be redirected by DID to corresponding extension.

Notes:

- Those steps will also need to be applied to the Branch Office.
- Users also could create Time based Conditions to use Inbound Routes on specific times, please refer to [TIME CONDITION} for more details.



TIME CONDITION

Users can set time condition on Inbound/Outbound rules in order to use each route on a specific time.

Supposing that Time Conditions are already set, if more details are needed, please refer to the following guide: [UCM6XXX Time Condition Guide](#)

Users can setup time conditions for trunks by following below steps:

1. Access the **UCM6xxx Web UI → Extension / Trunk → Outbound Routes**.
2. Navigate to time condition section.
3. Select the time condition when to use this trunk. (Office Time in this example)
4. Click on “Add” to add the time condition.

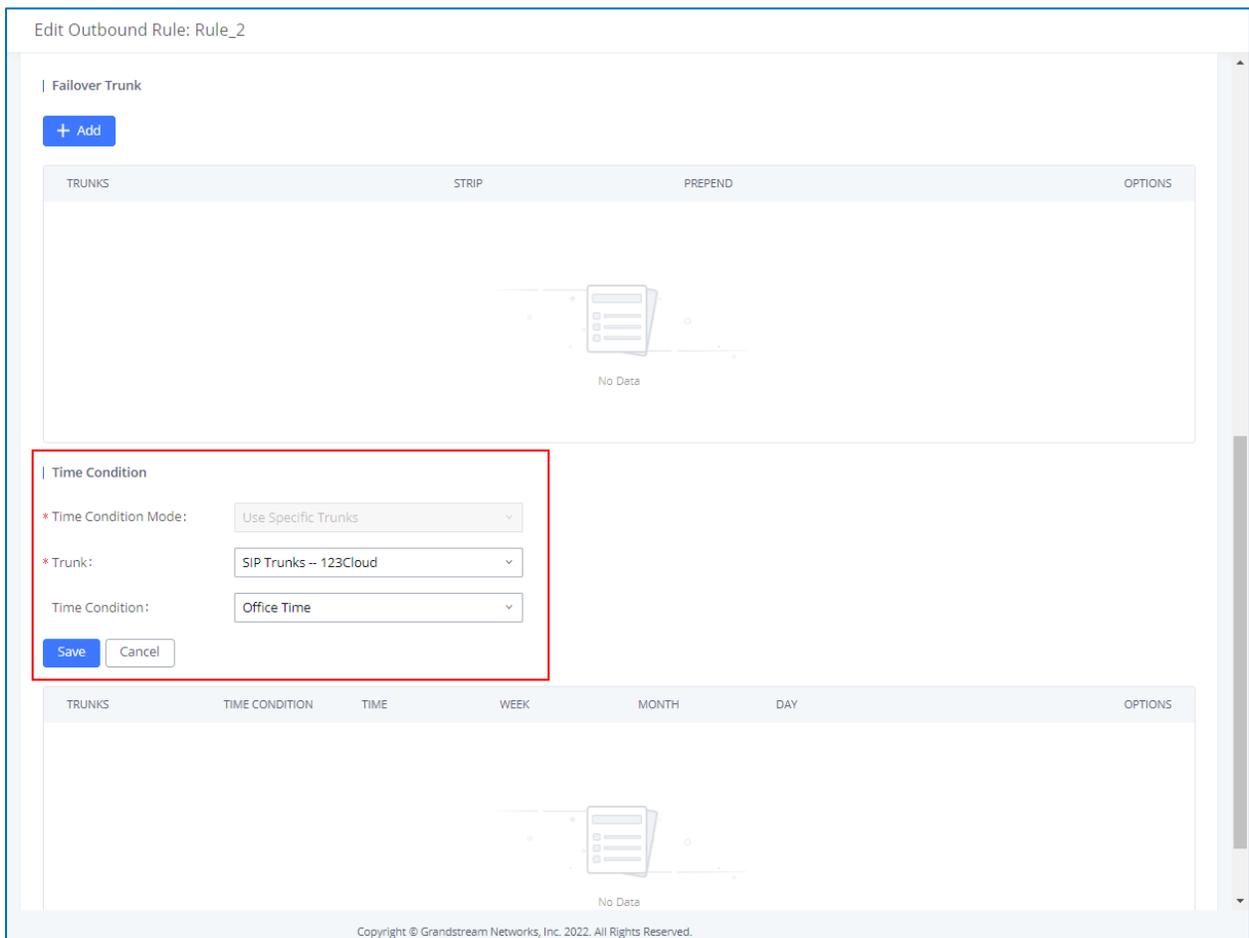


Figure 18: Outbound Time Office

The example above shows that on the Office Time, calls will be made using Provider_1 trunk.



Edit Outbound Rule: Provider_1 Cancel Save

General

• Calling Rule Name: Disable This Route:

• Pattern: Privilege Level:

PIN Groups: PIN Groups with Privilege Level:

Password:

Warning: Setting privilege level at "Internal" has potential security risks.

Enable Filter on Source Caller ID

Enable Filter on Source Caller ID: Outbound Route CID:

Call Duration Limit

Call Duration Limit:

Main Trunk

• Trunk: Strip:

Prepend:

Fallover Trunk

[+ Add](#)

TRUNKS	STRIP	PREPEND	OPTIONS
SIP Trunks -- Provider_1	2		

Time Condition

• Time Condition Mode: [Add](#)

TRUNKS	TIME CONDITION	TIME	WEEK	MONTH	DAY	OPTIONS
SIP Trunks -- Provider_2	Out of Office Time	Default	Default	Default	Default	

Figure 19: Out Of Office Time

The example above shows that on Out of Office Time, calls will be made using Provider_2 trunk.



FAILOVER TRUNK


Failover trunks can be used to make sure that a call goes through an alternate route, when the primary trunk is busy or down.

UCM6xxx will use Failover trunks in following scenarios:

- No response from first trunk after 32 seconds.
- If UCM6xxx receives 403/407/408/503/603 SIP responses from primary trunk.
- If primary trunk is disabled.
- If primary trunk is an analog trunk and it's busy or not connected.

Users can setup failover for peer and register trunks by following below steps:

1. Go to **PBX->Basic/Call Routes->Outbound Routes**.
2. Click on **“Click to add failover trunk”**.
3. Select then the trunk to be set as failover as shown in the below figure.
4. Strip and prepend digits if needed.

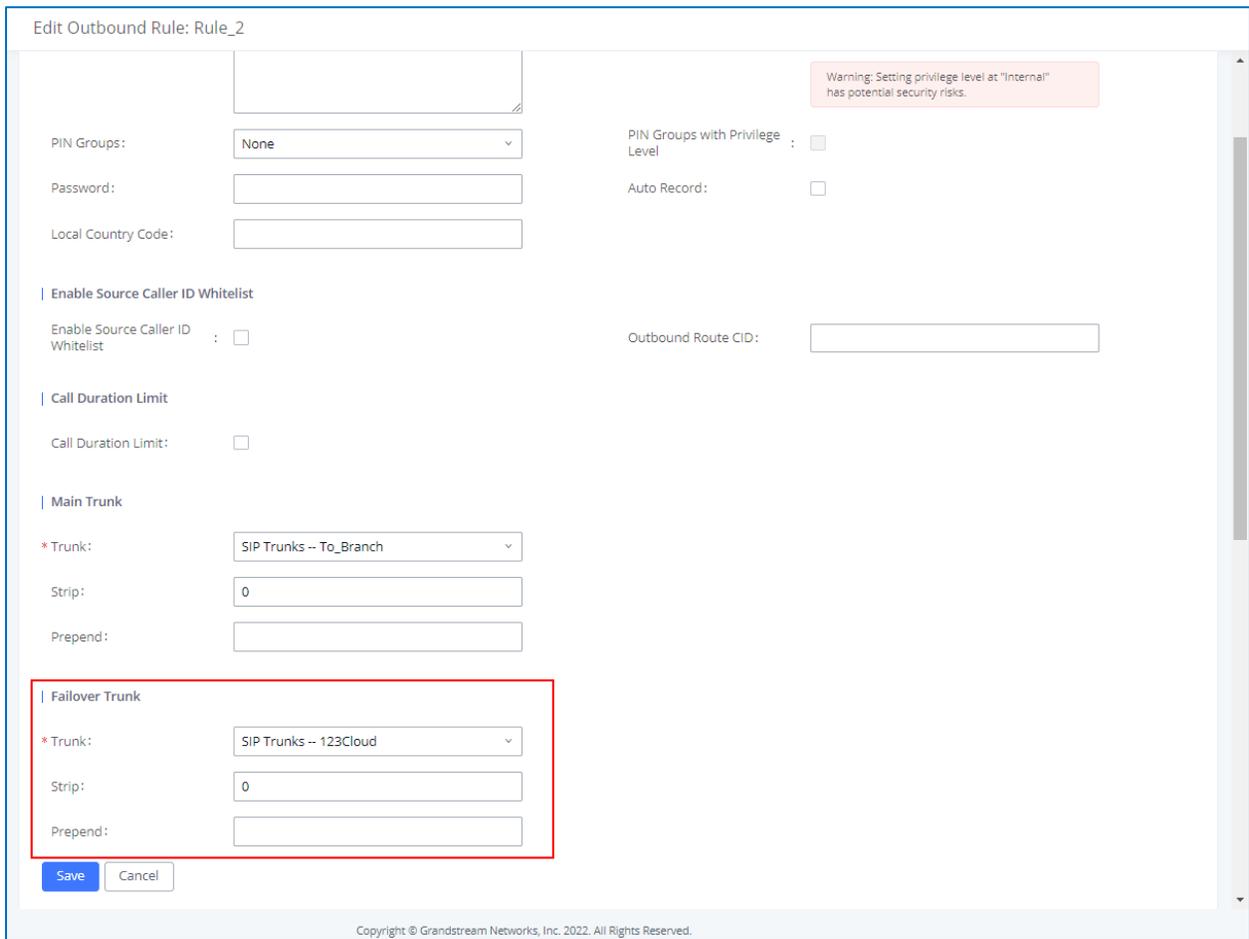

Edit Outbound Rule: Rule_2

Warning: Setting privilege level at "Internal" has potential security risks.

PIN Groups: PIN Groups with Privilege Level:

Password: Auto Record:

Local Country Code:

Enable Source Caller ID Whitelist

Enable Source Caller ID Whitelist: Outbound Route CID:

Call Duration Limit

Call Duration Limit:

Main Trunk

* Trunk: Strip: Prepend:


Failover Trunk

* Trunk: Strip: Prepend:

Save Cancel

Copyright © Grandstream Networks, Inc. 2022. All Rights Reserved.

Figure 20: Adding Failover Trunk

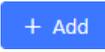Click on  to add another failover trunk.



Click on     to arrange the order. If there are multiple trunks set as failovers.
Click on  to edit, or  to delete the Trunk from Failover list.

